

Controllers, Indicators, and Recorders

Controllers

Page 1 of 5

Product	Date	Doc. Number	Title or Description
37	0108	PL 003-320	Parts List: Diaphragm Meter with Intermediate Linkage
37	1015	PSS 3-4A2 A	Product Specification Sheet: Diaphragm Measuring Element
40	0702	PL 001-105	Parts List: Box Pens, Pen-Arms, Indexes for Instruments
40	0514	PL 001-345	Parts List: Indicating Scale Assemblies
40C	0713	MI 011-490	Control Relays
40C	1012	PL 004-459	Parts List: Control Relays
40D	1012	PL 004-459	Parts List: Control Relays
40G	1012	PL 004-459	Parts List: Control Relays
40G	0314	MI 011-493	Control Relays
40K	1012	PL 004-459	Parts List: Control Relays
40M	0702	PL 001-105	Parts List: Box Pens, Pen-Arms, Indexes for Instruments
40M	0514	PL 001-345	Parts List: Indicating Scale Assemblies
40M	0117	PL 002-614	Parts List: 40M Relative Humidity Instruments
40M	0711	PL 004-111	Parts List: Recording Pneumatic Controllers, On-Off or Narrow Band Proportional Types
40M	0112	PL 004-112	Parts List: Indicating Pneumatic Controllers, On-Off or Narrow Band Proportional Types
40M	0410	PL 004-116	Parts List: Recording Pneumatic Controllers, Proportional Types
40M	0711	PL 004-121	Parts List: Dual or Duplex, On-Off or Narrow Band Types
40M	0410	PL 004-126	Parts List: Dual or Duplex Proportional Types
40M	0112	PL 004-140	Parts List: Right-Hand Proportional Types (except Narrow Band)
40M	0112	PL 004-142	Parts List: Left-Hand Proportional Types (except Narrow Band)
40M	0415	PSS 3-1A1 A	Product Specification Sheet: 40M Series Recorders, Indicators, and Controllers

Controllers, Indicators, and Recorders

Controllers

Page 2 of 5

Product	Date	Doc. Number	Title or Description
40P	0702	PL 001-105	Parts List: Box Pens, Pen-Arms, Indexes for Instruments
40P	0514	PL 001-345	Parts List: Indicating Scale Assemblies
40P	0711	PL 004-111	Parts List: Recording Pneumatic Controllers, On-Off or Narrow Band Proportional Types
40P	0112	PL 004-112	Parts List: Indicating Pneumatic Controllers, On-Off or Narrow Band Proportional Types
40P	0410	PL 004-116	Parts List: Recording Pneumatic Controllers, Proportional Types
40P	0711	PL 004-121	Parts List: Dual or Duplex, On-Off or Narrow Band Types
40P	0410	PL 004-126	Parts List: Dual or Duplex Proportional Types
40P	0112	PL 004-140	Parts List: Right-Hand Proportional Types (except Narrow Band)
40P	0112	PL 004-142	Parts List: Left-Hand Proportional Types (except Narrow Band)
40P	0711	PSS 3-1A2 A	Product Specification Sheet: Pressure Recorders, Indicators, and Recording or Indicating Controllers
40P	1015	PSS 3-1A2 B	Product Specification Sheet: Temperature Recorders, Indicators, and Recording or Indicating Controllers
40P	1015	PSS 3-1A2 C	Product Specification Sheet: Flow Recorders, Indicators, and Controllers
43AP	0816	DP 011-476	Dimensional Print
43AP	0180	MI 011-476	Installation and Operation
43AP	0486	MI 011-477	Servicing
43AP	0486	MI 011-481	Maintenance and Alignment
43AP	0816	PL 004-484	Parts List: Pneumatic Indicating Controller
43AP	0715	PSS 3-1B3 A	Product Specification Sheet: Pneumatic Indicating Controllers
43AP	0101	PSS 3-1B3 B	Product Specification Sheet: Controllers for Electronic Inputs
43APG	0114	PL 004-494	Parts List
100	0914	PL 004-580	Pneumatic Alarms and Alarm Actuators
100	1014	PSS 2B-12C1 A	Product Specification Sheet: Alarm Actuators
110	0676	PL 006-470	Receiver and Transmitter Assemblies for 110, 130 and 135 Series Instruments
130	0713	PL 004-560	Parts List: Automatic Control Section for Controllers
130	0676	PL 006-470	Receiver and Transmitter Assemblies for 110, 130 and 135 Series Instruments
130	0273	MI 017-470	Alarm Lights and Actuators
130	0783	MI 017-458	130 Series Controllers: Servicing Automatic Control Section
130	0277	MI 017-490	Series 130 and 138 Batch Controllers
130	0183	MI 017-459	Servicing Series 130 and 138 Controllers
130	1273	TI 29-201 A	130 Series Pneumatic Consotrol Controller
130	0770	MI 017-468	Servicing of Pointers and Manual Control Unit
130	0772	TI 29-202 A	130 Series Control Stations and 138 Series Remote Mounted Controllers
130	0975	MI 017-510	Series 130 On-Off Controllers

Controllers, Indicators, and Recorders

Controllers

Page 3 of 5

Product	Date	Doc. Number	Title or Description
130B	1169	TI 29-204 A	130B Series Batch Controller
130F	0806	DP 017-461	Dimensional Print
130F	1172	MI 017-455	Pneumatic Controllers - Installation and Operation
130FB	0806	DP 017-461	Dimensional Print
130FD	0806	DP 017-462	Dimensional Print: Control Station
130FD	0875	MI 017-465	Models 130PD and 130FD Control Stations with Series 58 or 59 Controller
130FD	0772	MI 017-466	Models 130PD and 130FD Pneumatic Control Stations
130P	1172	MI 017-455	Pneumatic Controllers - Installation and Operation
130P	0179	PL 004-551	Model 130P Consotrol Controller
130P	0806	DP 017-455	Dimensional Print: 130P Controller 130PB Batch Controller
130PD	0875	MI 017-465	Control Stations with Series 58 or 59 Controller
130PD	0772	MI 017-466	Models 130PD and 130FD Pneumatic Control Stations
130PD	0806	DP 017-465	Dimensional Print: 130PD Series Control Station
130M	0806	DP 017-450	Dimensional Print: 130M Controller 130MB Batch Controller
130M	0578	MI 017-450	Installation and Maintenance
130M	0115	PL 004-550	Parts List: Model 130M Consotrol Controller
130M	0495	PSS 2B-4H1 A	Product Specification Sheet
135	0873	MI 017-480	Series 135 Manual Stations
135	0788	PL 006-452	Parts List: 135TG Manual Loading Station Style B
135	0806	DP 017-482	Dimensional Print: 135B Manual Loading Station
135	0676	PL 006-470	Parts List: Receiver and Transmitter Assemblies for 110, 130 and 135 Series Instruments
135	0974	TI 29-251 A	135 Series Pneumatic Consotrol Auxiliary Stations
136	0806	DP 017-276	Dimensional Print: 136 Pneumatic Computing Relay for Pipe and Surface Mounting
136	0307	PL 006-343	Parts List: 136 Series Pneumatic Computing Relay, Styles A and B
136	1276	TI 29-253 A	Pneumatic Summing Units and Dynamic Compensators
136	0880	MI 017-276	Summing Units and Dynamic Compensators
138	0717	PSS 2B-4H1 M	138 Series Remote Mounted Pneumatic Controllers
138	0277	MI 017-490	Series 130 and 138 Batch Controllers
138	0183	MI 017-459	Servicing Series 130 and 138 Controllers
138	0772	TI 29-202 A	130 Series Control Stations and 138 Series Remote Mounted Controllers
138SP	0118	PL 004-590	Field-Mounted Pneumatic Controller
138LP	1012	PL 004-595	Field-Mounted Pneumatic Controller

Controllers, Indicators, and Recorders

Controllers

Page 4 of 5

Product	Date	Doc. Number	Title or Description
716C	1196	DP 018-575	Dimensional Print
716C	0297	MI 018-575	1/6 DIN Temperature
716C	0597	MI 018-579	1/16 DIN and 1/8 DIN Temperature Serial Communications Guide
716C	1196	PSS 2C-1B5 A	Product Specification Sheet
718P	1196	DP 018-574	Dimensional Print
718P	0297	MI 018-574	1/8 DIN Temperature with Series Interface
718P	0597	MI 018-578	1/8 DIN Process Serial Communications Guide
718P	1196	PSS 2C-1B4 A	Product Specification Sheet
718TC	1196	DP 018-572	Dimensional Print
718TC	0297	MI 018-573	1/8 DIN Temperature with mA Output
718TC	0597	MI 018-579	1/16 DIN and 1/8 DIN Temperature Serial Communications Guide
718TC	1196	PSS 2C-1B3 A	Product Specification Sheet
740C	0316	MI 018-871	Digital Circular Chart Recorder and Recording Controller - Installation, Operation, Configuration, and Maintenance
740C	1115	PL 009-166	Parts List: 740R Series Digital Circular Chart Recorder and 740C Series Digital Circular Chart and Recording Controller
740C	0316	PSS 2C-1A7 A	Product Specification Sheet
740CA	1115	DP 018-846	740RA and 740CA Digital Circular Chart Recorders and Recording Controllers
762	1117	MI 018-888	Serial Communications Guide
762	0895	TI 039-200	Technical Information
762C	0696	PSS 2C-1A1 D	Product Specification Sheet
762CNA	0906	DP 018-836	Dimensional Print
762CNA	0818	MI 018-885	SINGLE STATION MICRO
762CNA	0715	PL 009-136	Parts List
762CSA	0298	MI 018-889	Shelf Mounted
762CSA	1210	PL 009-139	Parts List
P25A	0206	DP 005-230	Dimensional Print: Pneumatic Diaphragm Actuator with Yoke
P25A	0292	MI 012-235	P25A, P50A, and P110A Pneumatic Diaphragm Actuators
P25A	0206	DP 005-236	Dimensional Print: Pneumatic Diaphragm Actuator with Options
P25A	0892	PL 005-236	Parts List: Pneumatic Diaphragm Actuator, Style A
P25A	1090	MI 012-237	Pneumatic Diaphragm Actuators
P50A	1090	MI 012-237	Pneumatic Diaphragm Actuators
P50A	0206	DP 005-231	Dimensional Print: Pneumatic Diaphragm Actuator with Yoke
P50A	0206	DP 005-237	Dimensional Print: Pneumatic Diaphragm Actuator with Options
P50A	0594	PL 005-237	Parts List: Pneumatic Diaphragm Actuator, Style A
P50A	0292	MI 012-235	P25A, P50A, and P110A Pneumatic Diaphragm Actuators
P110A	0292	MI 012-235	P25A, P50A, and P110A Pneumatic Diaphragm Actuators

Controllers, Indicators, and Recorders

Controllers

Page 5 of 5

Product	Date	Doc. Number	Title or Description
P110A	1012	DP 005-232	Dimensional Print: Pneumatic Diaphragm Actuator with Yoke
P110A	1090	MI 012-237	Pneumatic Diaphragm Actuators
P110A	0217	PL 005-238	Pneumatic Diaphragm Actuator—Style A

Controllers, Indicators, and Recorders

Indicators

Product	Date	Doc. Num	Title or Description
45P	0315	PSS 2B-1H1 E	Product Specification Sheet
65FS	1006	MI 018-272	Field Mounted
65FS	1214	PL 008-559	Parts List
65FS	0515	PSS 2A-3B1 C	Product Specification Sheet: Field-Mounted Indicating Milliammeters
65P	0616	PSS 2A-3B1 A	Product Specification Sheet
65P	1013	DP 018-275	Dimensional Print: 65PX-JY Panel Mounted Indicators
65P	1013	DP 018-279	Dimensional Print: 65PV-HY, 65PV-JY, and 65PV-VY Series (Vertical) Indicating Receiver - Milliammeter
110	0806	DP 017-412	110 Indicating Receiver
110	1069	MI 017-442	Series 110 Indicators and 135 Manual Stations
110	0273	MI 017-445	Alarm Lights and Actuators Series 110 Indicators and 135 Manual Stations
110	0770	MI 017-440	Series 110 Indicators
111	0179	PL 006-421	Parts List: Pneumatic Consotrol Indicator
112	0179	PL 006-422	Parts List: Pneumatic Consotrol Indicator
113	1079	PL 006-423	Parts List: Pneumatic Consotrol Indicator
135	1069	MI 017-442	Series 110 Indicators and 135 Manual Stations
135	0273	MI 017-445	Alarm Lights and Actuators Series 110 Indicators and 135 Manual Stations
135	0806	DP 017-480	Manual Loading Stations with Auto-Manual Switching
135	0806	DP 017-481	Manual Loading Stations
710D	1196	DP 018-571	Dimensional Print
710D	0297	MI 018-571	1/8 DIN Digital
710D	0597	MI 018-576	Digital Serial Communications Guide
710D	1196	PSS 2C-1B2 A	Product Specification Sheet

Controllers, Indicators, and Recorders

Recorders

Page 1 of 2

Product	Date	Doc. Num	Title or Description
40	0705	MI 001-130	Instrument Mounting and Connections Model 40 Recorders - Installation
40M	0705	MI 001-145	Mullins Chart Changers for Recorder - Installation and Operation (AS Reference MCC)
40M	0410	PL 001-301	Parts List: Circular Chart Recorder
40P	0705	MI 001-145	Mullins Chart Changers for Recorder - Installation and Operation (AS Reference MCC)
40P	0410	PL 001-301	Parts List: Circular Chart Recorder
100	0882	MI 017-410	102 Series Shelf Installation for 100 Series Instruments
100	0984	MI 017-412	101 Series Shelf Installation for 100 Series Instruments
120	0603	PL 006-413	Parts List: Style D
120	0914	PL 006-414	Parts List: Style E
120	0315	PL 006-416	Parts List: Chart Drives for 120 Series
120	1213	PSS 2B-3E1 A	Product Specification Sheet
127S	1012	PL 006-430	Parts List: Style A
127S	1113	MI 017-620	Pneumatic Indicating Recorder
127S	1113	MI 017-621	127S Pneumatic Recorder
227S	0701	PL 202-100	Parts List: Universal Electronic Shelf, Styles A, B, and C
227S	0385	PL 227-102	Parts List: Electronic Indicating Recorder, Style A
740R	0316	MI 018-871	Digital Circular Chart Recorder and Recording Controller - Installation, Operation, Configuration, and Maintenance
740R	1115	PL 009-166	Parts List: 740R Series Digital Circular Chart Recorder and 740C Series Digital Circular Chart and Recording Controller
740R	0316	PSS 2C-1A8 A	Product Specification Sheet
740RA	1115	DP 018-846	740RA and 740CA Digital Circular Chart Recorders and Recording Controllers
752RNA	0402	PSS 2C-1A16 A	Product Specification Sheet
763MNA	0901	PL 009-178	Parts List
763MNA	0402	PSS 2C-1A15 A	Product Specification Sheet
6100AF	0216	DP 018-910	Dimensional Print
6100AF	0809	MI 018-910	Paperless Graphic Recorders
6100AF	0110	PL 009-190	Parts List
6100AF	0513	PSS 2C-1C1 A	Product Specification Sheet: Paperless Graphic Recorder
6180AF	0216	DP 018-910	Dimensional Print
6180AF	0809	MI 018-910	Paperless Graphic Recorders
6180AF	0809	PL 009-190	Parts List
6180AF	0513	PSS 2C-1C1 A	Product Specification Sheet: Paperless Graphic Recorder

Controllers, Indicators, and Recorders

Recorders

Page 2 of 2

Product	Date	Doc. Num	Title or Description
E20S	0701	PSS 2A-3A1 C	Product Specification Sheet
E27R	0701	PL 202-100	Parts List: Universal Electronic Shelf, Styles A, B, and C
E27R	0191	MI 018-569	Electronic Indicating Recorders - Maintenance
E27R	0986	PL 009-130	Electronic Indicating Recorder - Style A
E27R	0795	MI 018-842	Adapting Existing Panel Cutouts
N-227S	0701	PL 202-100	Parts List: Universal Electronic Shelf, Styles A, B, and C
N-227S	1185	PL 227-103	Parts List: Electronic Indicating Recorder, Styles A and B

Electrochemical

Analyzers

Page 1 of 2

Product	Date	Doc. Num	Title or Description
BS810NX	1104	MI 611-226	Remote Communications Program for 875 Analyzers
BS811BV	0216	MI 611-207	Conversion Kit to Add HART Capability to 875 Series Analyzers
BS811FN	0206	MI 611-228	General Purpose Firmware Upgrade Kit for 875 Analyzers
BS811GC	1002	MI 611-189	Static Charge Control Upgrade for 875PH Analyzers
BS811GD	1002	MI 611-189	Static Charge Control Upgrade for 873PH-.P Analyzers
BS811GE	1002	MI 611-189	Static Charge Control Upgrade for 873PH-*W, *X, *Y, or *Z Analyzers
873	0418	MI 611-206	Intrinsic Safety Connector Diagrams and Nonincendive Circuits
873A	1003	PSS 6-1C1 F	Product Specification Sheet
873ACC	0604	MI 611-192	Ace Series Analyzers for Contacting Conductivity Measurement
873AEC	0604	MI 611-193	Ace Series Analyzers for Electrodeless Conductivity Measurement
873APH	0604	MI 611-191	Ace Series Analyzers for pH Measurements
873ARS	0604	MI 611-194	Ace Series Analyzers for Resistivity Measurements
873CC	0216	DP 611-162	Dimensional Print
873CC	0216	MI 611-166	Contact/Conductivity Measurement
873CC	0316	PL 611-016	Parts List
873CC	0718	PSS 6-1C1 E	Product Specification Sheet
873DO	0216	DP 611-149	Dimensional Print
873DO	0608	DP 611-162	Dimensional Print
873DO	0217	MI 611-169	Dissolved Oxygen Measurement
873DO	0316	PL 611-016	Parts List
873DO	0718	PSS 6-1C1 E	Product Specification Sheet
873DPX	0608	DP 611-162	Dimensional Print
873DPX	0816	MI 611-190	pH/ORP/ISE Measurement
873DPX	0316	PL 611-016	Parts List
873DPX	0594	PSS 6-1C1 B	Product Specification Sheet: Remote Preamplifier
873DPX	0718	PSS 6-1C1 E	Product Specification Sheet: Electrochemical Analyzers
873EC	0608	DP 611-162	Dimensional Print
873EC	0216	MI 611-167	Electrodeless Conductivity Measurement
873EC	0409	MI 611-220	System Calibration Examples
873EC	0316	PL 611-016	Parts List
873EC	0718	PSS 6-1C1 E	Product Specification Sheet
873PH	0608	DP 611-162	Dimensional Print
873PH	0216	MI 611-165	pH and ORP Measurement
873PH	0316	PL 611-016	Parts List
873PH	0594	PSS 6-1C1 B	Product Specification Sheet: Remote Preamplifier
873PH	0718	PSS 6-1C1 E	Product Specification Sheet: Electrochemical Analyzers

Electrochemical

Analyzers

Page 2 of 2

Product	Date	Doc. Num	Title or Description
873RS	0608	DP 611-162	Dimensional Print
873RS	0915	MI 611-168	Resistivity Measurement
873RS	0316	PL 611-016	Parts List
873RS	0718	PSS 6-1C1 E	Product Specification Sheet
875	0418	MI 611-206	Intrinsic Safety Connector Diagrams and Nonincendive Circuits
875	0216	MI 611-207	Conversion Kit BS811BV to Add HART Communication Capability
875	0418	MI 611-208	Safety Information
875	1104	MI 611-226	Remote Communications Program BS810NX
875	0216	MI 611-227	Operation, Configuration and Calibration Using a HART Communicator
875	0206	MI 611-228	General Purpose Firmware Upgrade Kit BS811FN
875	0508	MI 611-246	Remote Communications
875CR	0316	DP 611-164	Dimensional Print
875CR	0917	MI 611-222	Contacting Conductivity and Resistivity Measurements
875CR	0216	PL 611-158	Parts List: Style A
875CR	0216	PL 611-163	Parts List: Styles C-D
875CR	0917	PSS 6-3A1 B	Product Specification Sheet
875EC	0316	DP 611-164	Dimensional Print
875EC	0917	MI 611-224	Electrodeless Conductivity Measurement
875EC	0409	MI 611-220	System Calibration Examples
875EC	0216	PL 611-158	Parts List: Style A
875EC	0216	PL 611-163	Parts List: Styles C-D
875EC	0917	PSS 6-3N1 C	Product Specification Sheet
875PH	0316	DP 611-164	Dimensional Print
875PH	0917	MI 611-225	pH, ORP, or Ion Selective Electrode (ISE) Measurement - Style C
875PH	0216	PL 611-158	Parts List: Style A
875PH	0216	PL 611-163	Parts List: Styles B-C
875PH	0917	PSS 6-1A1 E	Product Specification Sheet

Electrochemical

Transmitters

Product	Date	Doc. Num	Title or Description
870IT	0418	MI 611-206	Intrinsic Safety Connector Diagrams and Nonincendive Circuits
870IT	0595	MI 611-213	Conversion Kit-C-BS806ZP to Add Rain Door Assembly
870IT	0418	MI 611-208	Safety Information
870ITEC	0398	DP 611-163	Dimensional Print
870ITEC	0409	MI 611-212	Electrodeless Conductivity Measurements
870ITEC	0409	MI 611-220	System Calibration Examples
870ITEC	1002	PL 611-153	Parts List: Style B
870ITEC	1002	PL 611-156	Parts List: Style A
870ITEC	0509	PSS 6-3N2 A	Product Specification Sheet
870ITPH	0398	DP 611-163	Dimensional Print
870ITPH	1005	MI 611-211	pH, ORP, and ION Selective Electrode Measurements
870ITPH	1002	PL 611-153	Parts List: Style B
870ITPH	1002	PL 611-156	Parts List: Style A
870ITPH	0509	PSS 6-1B1 B	Product Specification Sheet
876PH	0617	DP 611-260	Dimensional Print
876PH	0818	MI 611-262	Intelligent Transmitter for pH, ORP, and ISE Measurement
876PH	0518	PL 611-260	Parts List: Style A
876PH	0818	PSS 6-1A4 A	Model 876PH Intelligent Transmitter for pH, ORP, and ISE Measurement with HART® Communication Protocol
876EC	0617	DP 611-260	Dimensional Print
876EC	0818	PSS 6-3N3 A	Model 876EC Intelligent Transmitter for Electrodeless Conductivity
876EC	0818	MI 611-261	Model 876EC Intelligent Electrochemical Transmitter
876EC	0518	PL 611-260	Model 876PH, 876CR, 876EC Parts List: Style A
876CR	0617	DP 611-260	Dimensional Print
876CR	0818	PSS 6-3A2 A	Model Product Specification Sheet
876CR	0616	MI 611-260	Model 876CR Intelligent Electrochemical Transmitter for Contacting Conductivity and Resistivity Measurements
876CR	0518	PL 611-260	Model 876PH, 876CR, 876EC Parts List: Style A

Electrochemical

pH and ORP Sensors

Page 1 of 2

Product	Date	Doc. Num	Title or Description
BS810FA	0216	MI 611-209	PH10/ORP10 BVI Adapter Kit Replace 871PH Titanium
BS810FB	0216	MI 611-209	PH10/ORP10 BVI Adapter Kit Replace 871PH 316 ss
BS811HZ	0216	MI 611-209	PH10/ORP10 BVI Adapter Kit Replace 871A 316 ss
BS811JC	0216	MI 611-209	PH10/ORP10 BVI Adapter Kit Replace 871A Titanium
EP462	0115	PSS 6-1C6 A	Product Specification Sheet
ORP10	0315	DP 611-171	Dimensional Print: DolpHin® Series pH and ORP Sensors
ORP10	0216	DP 611-172	Dimensional Print: Legacy Insertion Tube and Ball Valve Assemblies for DolpHin Series pH and ORP Sensors
ORP10	0216	DP 611-173	Dimensional Print: Mounting Accessories for DolpHin
ORP10	0216	DP 611-182	Dimensional Print: BVA Series Ball Valve Insertion Assemblies for DolpHin® Series pH and ORP Sensors
ORP10	0216	MI 611-204	Use of Universal Bushing with DolpHin Sensors (BS810XB and BS810XC)
ORP10	0315	MI 611-205	DolpHin - Installation, Troubleshooting, Maintenance, and Parts List
ORP10	0418	MI 611-206	Intrinsic Safety Connector Diagrams and Nonincendive Circuits
ORP10	0418	MI 611-208	Safety Information
ORP10	0315	PSS 6-1C3 A	Product Specification Sheet
PH10	0315	DP 611-171	Dimensional Print: DolpHin® Series pH and ORP Sensors
PH10	0216	DP 611-172	Dimensional Print: Legacy Insertion Tube and Ball Valve Assemblies for DolpHin® Series pH and ORP Sensors
PH10	0216	DP 611-173	Dimensional Print: Mounting Accessories for DolpHin
PH10	0216	DP 611-182	Dimensional Print: BVA Series Ball Valve Insertion Assemblies for DolpHin® Series pH and ORP Sensors
PH10	0216	MI 611-204	Use of Universal Bushing with DolpHin Sensors (BS810XB and BS810XC)
PH10	0315	MI 611-205	DolpHin - Installation, Troubleshooting, Maintenance, and Parts List
PH10	0418	MI 611-206	Intrinsic Safety Connector Diagrams and Nonincendive Circuits
PH10	0418	MI 611-208	Safety Information
PH10	0315	PSS 6-1C3 A	Product Specification Sheet
PH12	0617	DP 611-214	Dimensional Print
PH12	0218	MI 611-214	pH Sensors and Accessories - Installation, Troubleshooting, and Maintenance
PH12	0218	MI 611-215	pH Sensors - Quick Start
PH12	0218	PL 611-214	Parts List
PH12	0218	PSS 6-1C5 A	Product Specification Sheet

Electrochemical

pH and ORP Sensors

Page 2 of 2

Product	Date	Doc. Num	Title or Description
871	0418	MI 611-206	Intrinsic Safety Connector Diagrams and Nonincendive Circuits
871A	0608	DP 611-141	Dimensional Print: Electrode Cleaning System (ECS), Flow-Through and Submersible Assemblies
871A	0216	DP 611-144	Dimensional Print: 871A pH and ORP Sensors
871A	0216	DP 611-145	Dimensional Print: 871A (pH and ORP) and 871DO (Dissolved Oxygen) Sensor Accessories
871A	0216	DP 611-157	Dimensional Print: Ball Valve Assemblies, Part Numbers BS806AN and BS806EP
871A	0216	MI 611-164	Installation
871A	0418	MI 611-208	Safety Information
871A	0216	PSS 6-1C2 B	Product Specification Sheet
871PH	0216	DP 611-113	Dimensional Print: pH and ORP
871PH	0316	DP 611-121	Dimensional Print: Mounting Assembly
871PH	0216	DP 611-122	Dimensional Print: Ball Valve Assembly
871PH	0307	DP 611-123	Dimensional Print: Optional Containment
871PH	0608	DP 611-140	Dimensional Print: ECS Flow Through Spool
871PH	0608	DP 611-141	Dimensional Print: ECS Flow Through Submersible
871PH	0493	MI 611-125	Electrode Cleaning System
871PH	0216	MI 611-136	Reference Junction Refill Kit for Sensors
871PH	0316	MI 611-148	Installation and Maintenance
871PH	0418	MI 611-208	Safety Information
871PH	0216	MI 611-188	Electrode Kit for Sensors
871PH	0216	PL 611-014	Parts List
871PH	0216	PSS 6-1C2 A	Product Specification Sheet

Electrochemical

Conductivity Sensors

Page 1 of 3

Product	Date	Doc. Num	Title or Description
871CC	0316	DP 611-091	Dimensional Print: Flow Chambers
871CC	0216	DP 611-092	Dimensional Print: Flanges 316 ss
871CC	0216	DP 611-093	Dimensional Print: Twist-Lock Bushing 316 ss
871CC	0216	DP 611-094	Dimensional Print: Twist-Lock Bushing PVC
871CC	0216	DP 611-105	Dimensional Print: Universal Mounting Bushing
871CC	0216	DP 611-131	Dimensional Print: 3/4 NPT Threaded Bushing (-A and -K)
871CC	0605	DP 611-132	Dimensional Print: Universal Mounting (-B)
871CC	0216	DP 611-133	Dimensional Print: Sanitary Flange Mounted (-C and -L)
871CC	0216	DP 611-134	Dimensional Print: Insertion Type (-D and -M)
871CC	0216	DP 611-135	Dimensional Print: Twist-Lock Mounted (-E)
871CC	0216	DP 611-136	Dimensional Print: 3/4 NPT Threaded Bushing and 1/2 NPT Conduit (-F)
871CC	0216	DP 611-139	Dimensional Print: DIP Type (-G)
871CC	0216	MI 611-151	Contacting Conductivity/Resistivity Sensors and Accessories
871CC	0418	MI 611-208	Safety Information
871CC	0216	PSS 6-3C2 A	Product Specification Sheet
871CC	0207	DP 611-117	Dimensional Print: Gate-Valve Assembly (GVI-2)
871CC	0207	DP 611-120	Dimensional Print: Gate-Valve Assembly
871CR	0216	DP 611-165	Dimensional Print: Universal Bore Piece
871CR	0216	DP 611-166	Dimensional Print: Bushing Mounted
871CR	0216	DP 611-167	Dimensional Print: Universal Bore Piece with Cable Connector or Conduit Fitting
871CR	0216	DP 611-168	Dimensional Print: Tri-Clamp Fittings
871CR	0217	DP 611-169	Dimensional Print: Insertion Sensors for use with Ball Valve Accessories
871CR	0216	DP 611-170	Dimensional Print: Accessories
871CR	0418	MI 611-208	Safety Information
871CR	0518	MI 611-221	Sensors and Accessories
871CR	1014	PL 611-019	Parts List: -A, -B, -C Series Conductivity/Resistivity Sensors
871CR	0518	PSS 6-3C2 B	Conductivity and Resistivity Sensors and Accessories
871EC	0216	DP 611-011	Dimensional Print: 871EC Electrodeless Conductivity Sensors
871EC	0216	DP 611-092	Dimensional Print: Flanges 316 ss
871EC	0216	DP 611-105	Dimensional Print: Universal Mounting Bushing
871EC	0216	DP 611-142	Dimensional Print: Ball Valve Assembly
871EC	0216	DP 611-155	Dimensional Print: Ball Valve Assembly (871EC-SP, -HP, -PP, -PT, -NL, -TF)
871EC	0216	DP 611-180	Dimensional Print: Ball Valve Assembly (871EC-RE, -LB, -BW, -UT)
871EC	0216	MI 611-150	Installation and Maintenance
871EC	0418	MI 611-208	Safety Information
871EC	0409	MI 611-220	System Calibration Examples

Electrochemical

Conductivity Sensors

Page 2 of 3

Product	Date	Doc. Num	Title or Description
871EC	0216	PSS 6-3C4 A	Product Specification Sheet
871FT	0216	DP 611-150	Dimensional Print: ANSI Class
871FT	0216	DP 611-151	Dimensional Print: NPT
871FT	1014	DP 611-152	Dimensional Print: Toroidal Flow-Through Conductivity Sensors
871FT	0216	DP 611-153	Dimensional Print: ANSI Class 300
871FT	0797	DP 611-158	Dimensional Print: Metric PN10
871FT	0608	DP 611-159	Dimensional Print: Metric PN16
871FT	1014	MI 611-202	Installation, Calibration, and Troubleshooting
871FT	0418	MI 611-208	Safety Information
871FT	0409	MI 611-220	System Calibration Examples
871FT	1014	PL 611-017	Parts List: Line Sizes
871FT	0216	PL 611-018	Parts List: Millimeter Line Sizes
871FT	1014	PSS 6-3Q1 A	Product Specification Sheet: Conductivity Sensors
910	0216	DP 611-092	Dimensional Print: Flanges 316 ss
910	0216	DP 611-093	Dimensional Print: Twist-Lock Bushing 316 ss
910	0216	DP 611-094	Dimensional Print: Twist-Lock Bushing PVC
910	0216	DP 611-105	Dimensional Print: Universal Mounting Bushing
910	0605	DP 611-124	Dimensional Print: 3/4 NPT Threaded Bushing
910	0605	DP 611-125	Dimensional Print: 3/4 NPT Threaded Bushing
910	0605	DP 611-126	Dimensional Print: Sanitary Flange Mounted
910	0605	DP 611-127	Dimensional Print: Insertion Type
910	0605	DP 611-128	Dimensional Print: Twist Lock Mounting
910	0605	DP 611-129	Dimensional Print: 3/4 NPT Threaded Bushing and 1/2 NPT Conduit
910	0605	DP 611-130	Dimensional Print: DIP Type
920	0216	DP 611-092	Dimensional Print: Flanges 316 ss
920	0216	DP 611-093	Dimensional Print: Twist-Lock Bushing 316 ss
920	0216	DP 611-094	Dimensional Print: Twist-Lock Bushing PVC
920	0216	DP 611-105	Dimensional Print: Universal Mounting Bushing
920	0605	DP 611-124	Dimensional Print: 3/4 NPT Threaded Bushing
920	0605	DP 611-125	Dimensional Print: 3/4 NPT Threaded Bushing
920	0605	DP 611-126	Dimensional Print: Sanitary Flange Mounted
920	0605	DP 611-127	Dimensional Print: Insertion Type
920	0605	DP 611-128	Dimensional Print: Twist Lock Mounting
920	0605	DP 611-129	Dimensional Print: 3/4 NPT Threaded Bushing and 1/2 NPT Conduit
920	0605	DP 611-130	Dimensional Print: DIP Type

Electrochemical

Conductivity Sensors

Page 3 of 3

Product	Date	Doc. Num	Title or Description
921	0216	DP 611-093	Dimensional Print: Twist-Lock Bushing 316 ss
921	0216	DP 611-094	Dimensional Print: Twist-Lock Bushing PVC
1210	0216	DP 611-092	Dimensional Print: Flanges 316 ss
1210	0216	DP 611-105	Dimensional Print: Universal Mounting Bushing
FT10	0216	DP 611-217	Dimensional Print
FT10	0418	MI 611-208	Safety Information
FT10	0216	MI 611-217	Flow-Through Conductivity Sensors - Installation, Calibration, Troubleshooting, and Maintenance
FT10	0409	MI 611-220	System Calibration Examples
FT10	0216	PL 611-141	Parts List
FT10	0216	PSS 6-3Q1 B	Product Specification Sheet

Electrochemical

Other Sensors

Product	Date	Doc. Num	Title or Description
	0207	TI 612-005	Electrodeless Conductivity, Toroidal Magnets, and the Procedure of Degaussing
222	0216	DP 611-122	Dimensional Print: Ball Valve Assembly
222	0804	DP 611-137	Dimensional Print: pH and ORP
871DO	0216	DP 611-149	Dimensional Print
871DO	0216	MI 611-200	Sensors and Accessories
871DO-C	0216	PL 611-121	Parts Lists - Dissolved Oxygen Sensors
871DO-C	1215	MI 611-203	Dissolved Oxygen Sensor Membrane Replacement Kits
871DO-C	0216	PSS 6-9B1 A	Product Specification Sheet
0051052	0904	DP 611-160	Dimensional Print: Junction Box (7 Terminals)
BS807BZ	0904	DP 611-160	Dimensional Print: Junction Box (8 Terminals)
BS811MR	0410	DP 611-174	Dimensional Print: Remote Preamplifier Junction Box
BS811MR	0410	MI 611-229	Remote Preamplifier Junction Box
BS813XN	0410	DP 611-174	Dimensional Print: Junction Box
BS813XN	0410	MI 611-229	Junction Box
EP402	0217	MI 611-177	Small-Bore Flow-Through Assembly
EP459A	0216	DP 611-210	Dimensional Print: Fluoride Measuring System
EP459A	0216	MI 611-210	Fluoride Measuring System
EP459A	0216	PL 611-210	Parts List: Fluoride Measuring System

Electrochemical

Product Application Data

Product	Date	Doc. Num	Title or Description
875PH	0904	PAD D3620-008	Analyzers for Control and Monitoring in Chromate Waste Treatment
	0316	PAD D3620-012	Point of Use Water Purity Measurements in Semiconductor Industry Using Intelligent Transmitters and Sensors
	0316	PAD G2600-006	Black Liquor Spill Reclamation
	0316	PAD G2600-015	Alkali Concentration Measurement System
	0316	PAD G2600-017	Bleaching
	0316	PAD G2600-018	Brownstock Washing
	0316	PAD G2600-019	Causticizing Control
	0316	PAD G2600-020	Steam Condensate Reclamation
	0316	PAD G2600-021	Dissolving Tank Density Control
	0316	PAD G2600-022	Paper Machine - Wet End pH Control
	0316	PAD G2600-023	Waste Water Treatment
	0316	PAD G2600-024	White Liquor Strength
	0316	PAD P4100-020	Intelligent Analytical Transmitters in Power Plant Applications
	0316	PAD P4100-021	Steam Condensate Leak Detection
	0316	PAD P4100-022	Reverse Osmosis Measurements
	0316	PAD P4100-023	pH Measurement in Wet Scrubbers
	0316	PAD P4100-024	pH Measurement in High Purity Boiler Water
	0316	PAD P4100-025	Demineralizer Regeneration Concentration Control
	0316	PAD P4100-026	Demineralization Bed Monitoring
	0499	PAD P4100-027	Cooling Tower Control
	0316	PAD P4100-028	Condensate Return
	0316	PAD P4100-029	Condensate Analysis
	0316	PAD P4100-030	Waste Water Treatment

Foxboro Eckardt

Electronic Transmitters

Product	Date	Doc. Num	Title or Description
104**	0696	PSS EML0900A-(en)	Product Specification Sheet Accessories for Buoyancy Transmitter
144LD	0503	MI EML0610A-(en)	Buoyancy Transmitter with Torque Tube
144LD	1008	MI EML0610E-(en)	Buoyancy Transmitter with Torque Tube and Displacer for Level, Interface and Density - All Versions
144LD	1107	MI EML0610F-(en)	Buoyancy Transmitter with Torque Tube and Displacer for Level, Interface and Density with Communication FOUNDATION Fieldbus
144LD	0708	PSS EML0610A-(en)	Product Specification Sheet
144LVD	0605	MI EML1610E-(en)	Buoyancy Transmitter for Liquid Level, Interface and Density
144LVD	0908	PSS EML1610A-(en)	Product Specification Sheet
167LP	1108	PSS EML0110A-(en)	Product Specification Sheet
204**	0109	PSS EML0901A-(en)	Product Specification Sheet Accessories for Buoyancy Transmitter
244LD	0210	MI EML0710E-(en)	Buoyancy Transmitter with Torque Tube and Displacer for Level, Interface and Density - All Versions
244LD	0908	PSS EML0710A-(en)	Product Specification Sheet
244LVP	0210	MI EML1710A-(en)	Buoyancy Transmitter for Liquid Level, Interface and Density
244LVP	0309	PSS EML1710A-(en)	Product Specification Sheet

Foxboro Eckardt

Positioners

Product	Date	Doc. Num	Title or Description
SRD960	0707	MI EVE0105B-(en)	Universal Positioner with HART Hand-Held Terminal
SRD960	0109	MI EVE0109A-(en)	Universal Positioner - All Versions
SRD960	0210	PSS EVE0109A-(en)	Product Specification Sheet: Universal Positioner/Position Transmitter
SRD991	0707	MI EVE0105B-(en)	Intelligent Positioner with HART Hand-Held Terminal
SRD991	0409	MI EVE0105E-(en)	Intelligent Positioner - All Versions
SRD991	1209	PSS EVE0105E-(en)	Product Specification Sheet: Intelligent Positioner
SRI986	0707	MI EVE0102A-(en)	Electro-Pneumatic Positioner
SRI986	0409	PSS EVE0102A-(en)	Product Specification Sheet: Electro-Pneumatic Positioner
SRI990	1007	MI EVE0107A-(en)	Analog Positioner/Electrical Position Transmitter
SRI990	0210	PSS EVE0107A-(en)	Product Specification Sheet: Analog Positioner/Electrical Position Transmitter
SRP981	0499	MI EVE0101A-(en)	Pneumatic Positioner
SRP981	0305	PSS EVE0101A-(en)	Product Specification Sheet: Pneumatic Positioner

Magnetic Flow

Transmitters

Page 1 of 3

Product	Date	Doc. Num	Title or Description
47	0216	MI 021-322	Magnetic Flow Transmitters - Installation, Commissioning, and Service
47	0908	MI 021-326	Flowmeter Remote Mounting Kit, Installation Kit A5E01268346
47	0216	PSS 1-6G1 A	Product Specification Sheet
48	0216	MI 021-322	Magnetic Flow Transmitters - Installation, Commissioning, and Service
48	0908	MI 021-326	Flowmeter Remote Mounting Kit, Installation Kit A5E01268346
48	0216	MI 021-329	Supplemental Installation Instructions for Transmitter used in PMO, HTST Flowmeter Applications
48	0216	PSS 1-6G1 A	Product Specification Sheet
	0716	DP 021-332	Dimensional Print: E96P Style D Magnetic Flow Transmitter Pipe Mounted
IMT25	0316	B0800AC	Ensuring Premium Performance with Foxboro I/A Series Pulsed dc Magnetic Flowmeters
IMT25	0416	DP 021-365	Dimensional Print
IMT25	0518	MI 021-387	Installation with 8000A, 2800, 8300, 9100A, 9200A, and 9300A
IMT25	0216	MI 021-390	Model IMT25 - Operation, Configuration, and Calibration
IMT25	0405	MI 021-391	System Maintenance with 8000A, 2800, 8300, 9100A, 9200A, and 9300A
IMT25	0216	MI 021-397	Operation, Configuration, and Calibration with HART Communicator
IMT25	0216	PL 008-745	Parts List
IMT25	1116	PSS 1-6F5 A	Product Specification Sheet: HART
IMT25-***F	0216	MI 014-900	Fieldbus Overview
IMT25-***F	0216	MI 021-399	Operation, Configuration, and Calibration from a Fieldbus Host
IMT25-***F	0309	PSS 1-6F5 B	Product Specification Sheet: FOUNDATION Fieldbus
IMT25L	0316	B0800AC	Ensuring Premium Performance with Foxboro I/A Series Pulsed dc Magnetic Flowmeters
IMT30A	0517	PSS 1-6H3 A	Foxboro® Model IMT30A Magnetic Flow Signal Converter
IMT30A	0517	MI 021-517	Foxboro® Model IMT30A Magnetic Flow Signal Converter Master Instruction
IMT30A	0517	MI 021-518	Foxboro® Model IMT30A Magnetic Flow Signal Converter Quick Start
IMT30A	0517	MI 021-528	Foxboro® Model IMT30A Magnetic Flow Signal Converter Supplementary Instructions - Description of Modbus Interface
IMT30A	0417	PL 008-760	Parts List for Foxboro Models IMT33A, IMT31A, and IMT30A Magnetic Flow Signal Converters and 9500A and 9600A Magnetic Flow Sensors
IMT31A	0517	PSS 1-6H2 A	Foxboro® Model IMT31A Magnetic Flow Signal Converter
IMT31A	0616	MI 021-512	ATEX & IECEx Supplementary Instructions 9500A / 9700A + IMT31A 4 / IMT31A N
IMT31A	0517	MI 021-515	Foxboro® Model IMT31A Magnetic Flow Signal Converter Master Instruction
IMT31A	0517	MI 021-516	Foxboro® Model IMT31A Magnetic Flow Signal Converter Quick Start
IMT31A	0517	MI 021-526	Foxboro® Model IMT31A Magnetic Flow Signal Converter Supplementary Instructions - Description of Foundation Fieldbus Interface

Magnetic Flow

Transmitters

Page 2 of 3

Product	Date	Doc. Num	Title or Description
IMT31A	0517	MI 021-527	Foxboro® Model IMT31A Magnetic Flow Signal Converter Supplementary Instructions - Description of Modbus Interface
IMT31A	0417	PL 008-760	Parts List for Foxboro Models IMT33A, IMT31A, and IMT30A Magnetic Flow Signal Converters and 9500A and 9600A Magnetic Flow Sensors
IMT31A	0817	MI 021-530	Foxboro® Model IMT31A Magnetic Flow Signal Converter Supplementary Instructions, Description of Profibus Interface
IMT33A	0517	PSS 1-6H1 A	Foxboro® Model IMT33A Magnetic Flow Signal Converter
IMT33A	0616	MI 021-511	ATEX & IECEx Supplementary Instructions 9500A / 9700A + IMT33A 4 and IMT33A H
IMT33A	0517	MI 021-513	Foxboro® Model IMT33A Magnetic Flow Signal Converter Master Instruction
IMT33A	0517	MI 021-514	Foxboro® Model IMT33A Magnetic Flow Signal Converter Quick Start
IMT33A	0517	MI 021-524	Foxboro® Model IMT33A Magnetic Flow Signal Converter Supplementary Instructions - Description of Foundation Fieldbus Interface
IMT33A	0517	MI 021-525	Foxboro® Model IMT33A Magnetic Flow Signal Converter Supplementary Instructions - Description of Modbus Interface
IMT33A	0417	PL 008-760	Parts List for Foxboro Models IMT33A, IMT31A, and IMT30A Magnetic Flow Signal Converters and 9500A and 9600A Magnetic Flow Sensors
IMT33A	0817	MI 021-529	Foxboro® Model IMT33A Magnetic Flow Signal Converter Supplementary Instructions, Description of Profibus Interface
IMT96	0416	DP 021-367	Dimensional Print
IMT96	0317	MI 021-402	With 2800 Series Flanged Flowtubes Installation
IMT96	0816	MI 021-403	Integral Keypad and Display, Local Operation, Configuration, and Calibration
IMT96	1117	MI 021-404	With 2800 Series Flanged Flowtubes System Maintenance
IMT96	0116	MI 021-412	Retrofitting 2800 Series with Flanged Flowtubes when Previously Connected to an E96
IMT96	0216	MI 021-501	IMT96SIM Magnetic Flowtube Simulator for use with IMT96 MagEXPERT™ Magnetic Flow Transmitters
IMT96	0816	MI 021-415	With HART Communications - Operation, Configuration, and Calibration
IMT96	0216	PL 008-747	Parts List
IMT96	0216	PSS 1-6F8 A	Product Specification Sheet
MAG2	0216	TI 027-077	Technical Information Magnetic Flowmeter Application Guideline
MAG2IC	0216	DP 021-500	Dimensional Print
MAG2IC	0216	MI 021-500	Flowmeter with Integrally Mounted Transmitter - Operation, Configuration, and Calibration
MAG2IC	0216	PSS 1-6G3 A	Product Specification Sheet
MAG2RS	0216	DP 021-501	Dimensional Print
MAG2RS	0216	MI 021-500	Remote Mounted Flowtube - Operation, Configuration, and Calibration
MAG2RS	0216	PSS 1-6G3 A	Product Specification Sheet

Magnetic Flow

Transmitters

Page 3 of 3

Product	Date	Doc. Num	Title or Description
MAG2RT	0216	DP 021-500	Dimensional Print
MAG2RT	0216	MI 021-500	Remote Mounted Transmitter - Operation, Configuration, and Calibration
MAG2RT	0216	PSS 1-6G3 A	Product Specification Sheet

Magnetic Flow

Flowtubes

Page 1 of 3

Product	Date	Doc. Num	Title or Description
	0316	B0800AC	Ensuring Premium Performance with Foxboro I/A Series Pulsed dc Magnetic Flowmeters - 8000A, 8300, and 9300A
2800	0216	DP 021-120	Dimensional Print: 2800 Series Magnetic Flowtube Sizes 2.5 to 300 mm (1/10 to 12 in) with Lined Metal Metering Tube
2800	0216	DP 021-137	Dimensional Print: 2800 Series Flanged Magnetic Flowtubes, 350 through 900 mm (14 through 36 in) Flowtube Sizes, Style C
2800	1216	MI 021-120	Flowtubes, Installation
2800	0216	MI 021-137	Installation
2800	1215	MI 021-138	Fault Location Guide
2800	0216	MI 021-141	Sanitary pftc Line
2800	0216	MI 021-151	Sealing Kits D0128GY (Flanged End) and D0155VA (Wafer End)
2800	0216	PL 008-541	Parts List: 15 to 300 mm (1/2 to 12 in) Sizes
2800	0216	PL 008-544	Parts List: 350 to 900 mm (14 to 36 in) Sizes
2800	1216	PSS 1-6B5 A	Product Specification Sheet: pftc, pfa, or Polyurethane Lined 1/10 through 12 in Sizes
2800	1216	PSS 1-6B5 C	Product Specification Sheet: Used with Model IMT96 MagEXPERT, E96, or IMT25, 15 to 80 mm (1/2 to 3 in) Flowtube Sizes, pftc Lined
2800	1216	PSS 1-6B5 E	Product Specification Sheet: Used with Model IMT96 MagEXPERT, E96, or IMT25, 14 to 36 in Sizes; pftc, Polyurethane, or Neoprene Lined
2891	0216	PL 008-543	Parts List: 2.5 mm (1/10 in) Size
2893	0216	PL 008-543	Parts List: 6 mm (1/4 in) Size
4700S	0216	MI 021-323	Sanitary Flowtube - Installation
4700S	0216	MI 021-329	Supplemental Installation Instructions for Flowtube used in PMO, HTST Flowmeter Applications
4700S	0216	MI 021-414	Flowmeter Submersible Mounting Kit FDK-085U0220
4700S	0216	PSS 1-6G2 A	Product Specification Sheet
8000A	0316	DP 021-358	Dimensional Print
8000A	0117	MI 019-179	Flow Safety Information
8000A	0216	MI 021-151	Sealing Kits D0128GY (Flanged End) and D0155VA (Wafer End)
8000A	1215	MI 021-380	Compact Magnetic Flowtubes - Installation
8000A	0216	PL 008-740	Parts List
8000A	0216	PSS 1-6F2 A	Product Specification Sheet: Wafer Body, Ceramic- or pfa-Lined, 1.6 to 150 mm (1/16 to 6 in) Line Sizes
8000A	0216	PSS 1-6F2 C	Product Specification Sheet: Ceramic-Lined 15 to 80 mm (1/2 to 3 in) Sizes
8000A	0716	DP 021-363	Dimensional Print: Compact Magnetic Flowtubes

Magnetic Flow

Flowtubes

Page 2 of 3

Product	Date	Doc. Num	Title or Description
8300	0216	DP 021-360	Dimensional Print: Flanged
8300	0216	DP 021-361	Dimensional Print: ptfe-Lined Sanitary
8300	0216	MI 021-151	Sealing Kits D0128GY (Flanged End) and D0155VA (Wafer End)
8300	1216	MI 021-381	8300 Series Magnetic Flowtubes - Installation
8300	0216	PL 008-741	Parts List
8300	1216	PSS 1-6F2 B	Product Specification Sheet: ptfe, Polyurethane, or Neoprene Lined, 1/2 through 36 in Sizes
8300	0216	PSS 1-6F2 C	Product Specification Sheet: Ceramic-Lined 15 to 80 mm (1/2 to 3 in) Sizes
8400A	0717	MI 021-535	Foxboro® Model 8400A Magnetic Flowmeter wafer version, Master Instruction
8400A	1017	MI 021-536	Foxboro® Model 8400A Magnetic Flowmeter wafer version, Quick Start
8400A	1017	PSS 1-6H7 A	Foxboro® Model 8400A Magnetic Flowmeter wafer version
8500A	0717	MI 021-537	Foxboro® Model 8500A Magnetic Flowmeter wafer version, Master Instruction
8500A	0817	MI 021-538	Foxboro® Model 8500A Magnetic Flowmeter wafer version, Quick Start
8500A	1017	PSS 1-6H8 A	Foxboro® Model 8500A Magnetic Flowmeter wafer version
9100A	0216	DP 021-368	Dimensional Print: 9100A Flanged: 1 to 78 in (25 to 2000 mm) Sizes; Neoprene or EPDM Lining
9100A	0216	DP 021-369	Dimensional Print: 9100A Flanged: 1 to 78 in (25 to 2000 mm) Sizes; Ebonite Lining
9100A	0117	MI 019-179	Flow Safety Information
9100A	0216	MI 021-413	Flowtubes, Installation
9100A	0216	PL 008-748	Parts List
9100A	1216	PSS 1-6F9 A	Product Specification Sheet
9200A	0216	DP 021-368	Dimensional Print: 9200A Flanged: 8 to 48 in (200 to 1200 mm) Sizes; Neoprene, EPDM, Linatex, Ebonite, or ptfe Lining
9200A	0216	DP 021-369	Dimensional Print: 9200A Flanged: 1/2 to 78 in (15 to 2000 mm) Sizes; Neoprene, EPDM, Linatex, Ebonite, or ptfe Lining
9200A	0117	MI 019-179	Flow Safety Information
9200A	0216	MI 021-413	Flowtubes, Installation
9200A	0316	PL 008-748	Parts List
9200A	1216	PSS 1-6F10 A	Product Specification Sheet
9300A	0316	DP 021-364	Dimensional Print
9300A	0117	MI 019-179	Flow Safety Information
9300A	0216	MI 021-151	Sealing Kits D0128GY (Flanged End) and D0155VA (Wafer End)
9300A	1216	MI 021-386	Flanged Magnetic Flowtubes, pfa-, ptfe-, or Polyurethane-Lined, Installation
9300A	0216	PL 008-742	Parts List
9300A	1216	PSS 1-6F4 A	Product Specification Sheet
9500A	0717	MI 021-519	Foxboro® Model 9500A Magnetic Flow Sensor Master Instruction

Magnetic Flow

Flowtubes

Page 3 of 3

Product	Date	Doc. Num	Title or Description
9500A	0717	MI 021-520	Foxboro® Model 9500A Magnetic Flow Sensor Quick Start
9500A	0616	MI 021-511	ATEX & IECEx Supplementary Instructions 9500A / 9700A + IMT33A 4 and IMT33A H
9500A	0616	MI 021-512	ATEX & IECEx Supplementary Instructions 9500A / 9700A + IMT31A 4 / IMT31A N
9500A	0317	PSS 1-6H4 A	Foxboro® Model 9500A Magnetic Flow Sensor
9500A	0417	PL 008-760	Parts List for Foxboro Models IMT33A, IMT31A, and IMT30A Magnetic Flow Signal Converters and 9500A and 9600A Magnetic Flow Sensors
9600A	0717	MI 021-521	Foxboro® Model 9600A Magnetic Flow Sensor for hygienic and sanitary applications Master Instruction
9600A	0717	MI 021-522	Foxboro® Model 9600A Magnetic Flow Sensor for hygienic and sanitary applications Quick Start
9600A	0717	PSS 1-6H5 A	Foxboro® Model 9600A Magnetic Flow Sensor for hygienic and sanitary applications
9600A	0417	PL 008-760	Parts List for Foxboro Models IMT33A, IMT31A, and IMT30A Magnetic Flow Signal Converters and 9500A and 9600A Magnetic Flow Sensors
9700A	0817	MI 021-533	Foxboro® Model 9700A Magnetic Flow Sensor, Master Instruction
9700A	1017	MI 021-534	Foxboro® Model 9700A Magnetic Flow Sensor, Quick Start
9700A	1017	PSS 1-6H6 A	Foxboro® Model 9700A Magnetic Flow Sensor

Magnetic Flow

Other

Product	Date	Doc. Num	Title or Description
	0216	TI 27-71f	Technical Information Material Selection Guide
	0216	TI 027-072	Technical Information Electrical Conductivity of Process Liquids
IMTSIM	0316	B0800AC	Ensuring Premium Performance with Foxboro I/A Series Pulsed dc Magnetic Flowmeters
IMTSIM	0116	MI 021-392	Magnetic Flowtube Simulator
IMTSIM	0216	PSS 1-6F7 A	Product Specification Sheet

Mass Flow

Transmitters

Product	Date	Doc. Num	Title or Description
	0300	TI 001-053	Tutorial Percent Solids Calculation
CFT50	0316	B0800AH-C	Digital Coriolis Mass Flowmeters Installation Guidelines and Quick Start - HART
CFT50	0316	B0800AL-B	Digital Coriolis Mass Flowmeters Installation Guidelines and Quick Start - Modbus
CFT50	0609	DP 019-375	Dimensional Print
CFT50	0510	MI 019-132	Digital Coriolis Transmitter with HART - Installation, Startup, Configuration, and Maintenance
CFT50	0409	MI 019-133	Safety Connection Diagrams (FM, CSA)
CFT50	0912	MI 019-134	Digital Coriolis Transmitter with Modbus - Installation, Startup, Configuration, and Maintenance
CFT50	0117	MI 019-179	Flow Safety Information
CFT50	0216	PL 008-704	Parts List
CFT50	0410	PSS 1-2B7 A	Product Specification Sheet
CFT51	0915	B0800AM	CFT51 Digital Coriolis Mass Flowmeters - Installation and Quick Start
CFT51	1115	DP 019-376	Digital Coriolis Mass Flow Transmitter Models CFT51 and NOCT60A
CFT51	0517	MI 019-140	I/A Series® Digital Coriolis Mass Flow Transmitter
CFT51	0216	MI 019-141	CFT51 - Safety Connection Diagrams (FM, CSA)
CFT51	0117	MI 019-179	Flow Safety Information
CFT51	0517	PL 008-752	Parts List: Digital Coriolis Mass Flow Transmitter Models CFT51 and NOCT60A
CFT51	0517	PSS 1-2B7 C	Product Specification Sheet: Model CFT51 Digital Coriolis Mass Flow and Density Transmitter
NOCT60A	1115	DP 019-376	Digital Coriolis Mass Flow Transmitter Models CFT51 and NOCT60A
NOCT60A	0316	MI 019-142	Model NOCT60A Net Oil Coriolis Transmitter
NOCT60A	0117	MI 019-179	Flow Safety Information
NOCT60A	0517	PL 008-752	Parts List: Digital Coriolis Mass Flow Transmitter Models CFT51 and NOCT60A
NOCT60A	1115	PSS 1-2B6 A	Model NOCT60A Net Oil Coriolis Transmitter

Mass Flow

Flowtubes

Product	Date	Doc. Num	Title or Description
CFS10	0216	DP 019-182	Dimensional Print: 6-50 mm (1/4 to 2 inch)
CFS10	0216	DP 019-366	Dimensional Print: 3 mm (1/8 inch)
CFS10	0517	MI 019-120	Installation, Startup, Troubleshooting and Maintenance
CFS10	0117	MI 019-179	Flow Safety Information
CFS10	0216	PL 008-702	Parts List: Style A
CFS10	0517	PL 008-733	Parts List: Style B
CFS10	0517	PSS 1-2B1 A	Product Specification Sheet
CFS20	0216	DP 019-183	Dimensional Print
CFS20	0517	MI 019-120	Installation, Startup, Troubleshooting and Maintenance
CFS20	0117	MI 019-179	Flow Safety Information
CFS20	0216	PL 008-703	Parts List: Style A
CFS20	0517	PL 008-735	Parts List: Style B
CFS20	0517	PSS 1-2B1 A	Product Specification Sheet
CFS25	0315	DP 019-186	I/A Series® Mass Flowmeters Model CFS25 Mass Flowtubes
CFS25	0515	MI 019-125	I/A Series® Mass Flowtubes Model CFS25
CFS25	0117	MI 019-179	Flow Safety Information
CFS25	0515	PSS 1-2B3 A	Product Specification Sheet: Model CFS25 Coriolis Flowtubes

Pressure Transmitters

d/p Cell

Page 1 of 3

Product	Date	Doc. Num	Title or Description
	0316	B0800AE	Ensuring Premium Performance with Foxboro Intelligent Level Transmitters
	0316	B0800AG	Pressure Transmitters - Getting Started
11DM	0315	PL 006-265	Parts List: Styles C and D
13A	0499	MI 022-310	d/p Cell Installation and Operation
13A	0789	MI 022-345	Maintenance
13A	0315	PL 006-175	Parts List
13A	0115	PSS 2B-1C1 A	Product Specification Sheet
13H	0315	PL 006-177	Parts List
13HA	0115	PSS 2B-1C1 A	Product Specification Sheet
15A	0315	PL 006-176	Parts List: Styles B-E
15A	0115	PSS 2B-1C1 A	Product Specification Sheet
CO	0316	DP 022-335	Dimensional Print
CO	0316	MI 022-335	Compact Orifice with d/p Cell Transmitters
CO	0216	PL 006-172	Parts List: Compact Orifice with d/p Cell Transmitters
CO	0216	PSS 3-5A1 E	Product Specification Sheet: Compact Orifice with d/p Cell Transmitters
IDP**-F	0216	MI 014-900	Fieldbus Overview
IDP10	0115	DP 020-446	Dimensional Print
IDP10	0316	MI 020-357	Functional Safety Manual
IDP10	1116	MI 020-358	Safety Information
IDP10	1116	MI 020-359	Universal Instruction Manual
IDP10	0216	MI 020-427	Pressure Transmitters Intrinsic Safety Diagrams and Nonincendive Circuits
IDP10	1016	PL 009-005	Parts List
IDP10	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IDP10-A	0716	MI IDP10-A	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA Output Signal)
IDP10-A	0416	PSS 2A-1C14 C	Product Specification Sheet
IDP10-D	0716	MI IDP10-D	Installation, Calibration, Configuration, and Maintenance (FoxCom Communication)
IDP10-D	0616	PSS 2A-1C14 A	Product Specification Sheet
IDP10-F	0716	MI IDP10-F	Installation, Calibration, Configuration and Maintenance (FOUNDATION Fieldbus Communication)
IDP10-F	0517	PSS 2A-1C13 E	Product Specification Sheet
IDP10M	0717	MI 020-608	Models IAP10M, IGP10M, and IDP10M Pressure Transmitters with Modbus Communication
IDP10M	0817	MI 020-607	Models IAP10M, IGP10M, and IDP10M Pressure Transmitters with Modbus Communication - Installation, Operation, Maintenance, and Troubleshooting
IDP10-T	0216	MI 020-366	I/A Series Pressure Transmitters with HART Communicator

Pressure Transmitters

d/p Cell

Page 2 of 3

Product	Date	Doc. Num	Title or Description
IDP10-T	0716	MI IDP10-T	Installation, Calibration, Configuration, and Maintenance (HART Communications)
IDP10-T	0616	PSS 2A-1C14 B	Product Specification Sheet
IDP10-V	1016	MI IDP10-V	Installation, Calibration, Configuration, and Maintenance (1 to 5 V dc Output Signal)
IDP10-V	1116	PSS 2A-1C13 D	Product Specification Sheet
IDP10S	0514	DP 020-464	Dimensional Print
IDP10S-T	0917	PSS 2A-1Z9 E	I/A Series® Electronic Pressure Transmitters Options and Accessories
IDP10S-T	0917	MI 020-602	IDP10S Differential Pressure Transmitter with HART Communication Installation, Operation, Calibration, Configuration, and Maintenance
IDP10S-T	0917	PL 009-026	Foxboro® S Series Pressure Transmitters Model IDP10S Differential Pressure Transmitter
IDP10S-T	0917	PSS 2A-1C14 M	Product Specification Sheet: With HART® Communication Protocol
IDP15D	0216	MI 020-600	Installation, Operation, Calibration, Configuration, and Maintenance
IDP15D	0216	MI 020-540	Safety Information
IDP15D	1016	PSS 2A-1C17 A	Product Specification Sheet
IDP15D	0216	DP 020-600	Dimensional Print
IDP25	0115	DP 020-446	Dimensional Print
IDP25	1116	MI 020-358	Safety Information
IDP25	1116	MI 020-359	Universal Instruction Manual
IDP25	0216	MI 020-427	Pressure Transmitters Intrinsic Safety Diagrams and Nonincendive Circuits
IDP25	1016	PL 009-013	Parts List
IDP25	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IDP25-F	0816	MI IDP25-F/IDP50-F	Installation, Calibration, Configuration, and Maintenance (FOUNDATION Fieldbus Communication)
IDP25-F	0816	PSS 2A-1C14 K	Product Specification Sheet
IDP25-T	0216	MI 020-366	I/A Series Pressure Transmitters with HART Communicator
IDP25-T	0816	MI IDP25-T/IDP50-T	Installation, Calibration, Configuration, and Maintenance (HART Communication)
IDP25-T	0816	PSS 2A-1C14 K	Product Specification Sheet
IDP31D	0216	MI 020-600	Installation, Operation, Calibration, Configuration, and Maintenance
IDP31D	0216	MI 020-540	Safety Information
IDP31D	1016	PSS 2A-1C17 A	Product Specification Sheet
IDP31D	0216	DP 020-600	Dimensional Print
IDP32D	0216	MI 020-600	Installation, Operation, Calibration, Configuration, and Maintenance
IDP32D	0216	MI 020-540	Safety Information
IDP32D	1016	PSS 2A-1C17 A	Product Specification Sheet

Pressure Transmitters

d/p Cell

Page 3 of 3

Product	Date	Doc. Num	Title or Description
IDP32D	0216	DP 020-600	Dimensional Print
IDP50	0115	DP 020-446	Dimensional Print
IDP50	1116	MI 020-358	Safety Information
IDP50	1116	MI 020-359	Universal Instruction Manual
IDP50	0216	MI 020-427	Pressure Transmitters Intrinsic Safety Diagrams and Nonincendive Circuits
IDP50	1016	PL 009-014	Parts List
IDP50	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IDP50-F	0816	MI IDP25-F/IDP50-F	Installation, Calibration, Configuration, and Maintenance (FOUNDATION Fieldbus Communication)
IDP50-F	0816	PSS 2A-1C14 L	Product Specification Sheet
IDP50-T	0216	MI 020-366	I/A Series Pressure Transmitters with HART Configurator
IDP50-T	0816	MI IDP25-T/IDP50-T	Installation, Calibration, Configuration, and Maintenance (HART Communication)
IDP50-T	0816	PSS 2A-1C14 L	Product Specification Sheet

Pressure Transmitters

Absolute/Gauge

Page 1 of 6

Product	Date	Doc. Num	Title or Description
	0316	B0800AE	Ensuring Premium Performance with Foxboro Intelligent Level Transmitters
	0316	B0800AG	Pressure Transmitters - Getting Started
	0716	DP 004-311	Dimensional Print: 11GM Series Pneumatic Gauge Pressure Transmitter
11A	0701	PSS 2B-1A1 A	Product Specification Sheet
11AH	0315	PL 006-273	Parts List: Styles C and D
11AL	0304	PL 006-272	Parts List: Styles C and D
11AM	0315	PL 006-271	Parts List: Styles D and E
11GH	0315	PL 006-267	Parts List: Styles D and E
11GH	0315	PSS 2B-1A3 A	Product Specification Sheet
11GM	0499	MI 004-311	Removable Sealed Pressure
11GM	0499	MI 022-415	Pressure Transmitter Style C-D
11GM	0315	PL 006-266	Parts List
11GM	0315	PSS 2B-1A3 A	Product Specification Sheet
15F	0315	PL 006-179	Parts List
IAP**-F	0216	MI 014-900	Fieldbus Overview
IAP10	0615	DP 020-212	Dimensional Print: Sanitary Gauge or Absolute Level 2-inch Tri-Clamp
IAP10	0615	DP 020-217	Dimensional Print: Sanitary with Pulp and Paper Process Connections
IAP10	0615	DP 020-218	Dimensional Print: Sanitary with 1 1/2-, 2-, 3-inch Tri-Clamp
IAP10	0615	DP 020-219	Dimensional Print: Sanitary with Mini Tank Spud Seal
IAP10	0615	DP 020-447	Dimensional Print: IAP10, IGP10, IAP20, IGP20, IGP25, IGP50
IAP10	0316	MI 020-357	Functional Safety Manual
IAP10	1116	MI 020-358	Safety Information
IAP10	1116	MI 020-359	Universal Instruction Manual
IAP10	0216	MI 020-427	Pressure Transmitters Intrinsic Safety Diagrams and Nonincendive Circuits
IAP10	1016	PL 009-006	Parts List: I/A Series® Electronic Pressure Transmitters
IAP10	0616	PSS 2A-1C13 K	Product Specification Sheet: Sanitary Process Connections
IAP10	0618	PSS 2A-1C13 L	Product Specification Sheet: Process Connections for Pulp and Paper
IAP10	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IAP10-A	0716	MI IAP10-A/IGP10-A	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA)
IAP10-A	0616	PSS 2A-1C13 C	Product Specification Sheet
IAP10-D	0716	MI IAP10-D/IGP10-D	Installation, Calibration, Configuration, and Maintenance (FoxCom Communication)
IAP10-D	0616	PSS 2A-1C13 A	Product Specification Sheet
IAP10-F	0716	MI IAP10-F/IGP10-F	Installation, Calibration, Configuration, and Maintenance (FOUNDATION Fieldbus Communication)
IAP10-F	0517	PSS 2A-1C13 E	Product Specification Sheet

Pressure Transmitters

Absolute/Gauge

Page 2 of 6

Product	Date	Doc. Num	Title or Description
IAP10M	0717	MI 020-608	Models IAP10M, IGP10M, and IDP10M Pressure Transmitters with Modbus Communication
IAP10M	0817	MI 020-607	Models IAP10M, IGP10M, and IDP10M Pressure Transmitters with Modbus Communication - Installation, Operation, Maintenance, and Troubleshooting
IAP10-T	0216	MI 020-366	I/A Series Pressure Transmitters with HART Communicator
IAP10-T	0716	MI IAP10-T/IGP10-T	Installation, Calibration, Configuration, and Maintenance (HART Communication)
IAP10-T	0517	PSS 2A-1C13 B	Product Specification Sheet
IAP10-V	0716	MI IAP10-V/IGP10-V	Installation, Calibration, Configuration, and Maintenance (1 to 5 V dc Output Signal)
IAP10-V	1116	PSS 2A-1C13 D	Product Specification Sheet
IAP10S	0817	DP 020-463	I/A Series® Pressure S Series Transmitters
IAP10S	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
IAP10S	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
IAP10S	0118	MI 020-541	I/A Series® Pressure S Series Transmitters FM/CSA Safety Information
IAP10S	0118	MI 020-542	I/A Series® Pressure S Series Transmitters ATEX/IECEX Safety Information
IAP10S-T	0917	PL 009-025	Foxboro® S Series Pressure Transmitters Model IGP10S Direct Connected Gauge Pressure Transmitter Model IAP10S Direct Connected Absolute Pressure Transmitter
IAP10S-T	0917	PSS 2A-1Z9 E	I/A Series® Electronic Pressure Transmitters Options and Accessories
IAP10S-T	0917	MI 020-601	IAP10S Absolute Pressure and IGP10S Gauge Pressure with HART Communication: Installation, Operation, Calibration, Configuration, and Maintenance
IAP10S-T	0917	PSS 2A-1C13 P	Foxboro® Models IAP10S, IGP10S, and IGP20S Absolute and Gauge Pressure Transmitters with HART® Communication Protocol
IAP20	0615	DP 020-217	Dimensional Print: Sanitary with Pulp and Paper Process Connections
IAP20	0615	DP 020-218	Dimensional Print: Sanitary with 1 1/2-, 2-, 3-inch Tri-Clamp
IAP20	0615	DP 020-219	Dimensional Print: Sanitary with Mini Tank Spud Seal
IAP20	0615	DP 020-447	Dimensional Print: IAP10, IGP10, IAP20, IGP20, IGP25, IGP50
IAP20	0316	MI 020-357	Functional Safety Manual
IAP20	1116	MI 020-358	Safety Information
IAP20	1116	MI 020-359	Universal Instruction Manual
IAP20	0216	MI 020-427	Pressure Transmitters Intrinsic Safety Diagrams and Nonincendive Circuits
IAP20	1116	PL 009-007	Parts List
IAP20	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IAP20-A	0716	MI IAP20-A/IGP20-A	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA)
IAP20-A	0616	PSS 2A-1C13 C	Product Specification Sheet

Pressure Transmitters

Absolute/Gauge

Page 3 of 6

Product	Date	Doc. Num	Title or Description
IAP20-D	0716	MI IAP20-D/IGP20-D	Installation, Calibration, Configuration, and Maintenance (FoxCom Communication)
IAP20-D	0616	PSS 2A-1C13 A	Product Specification Sheet
IAP20-F	0716	MI IAP20-F/IGP20-F	Installation, Calibration, Configuration, and Maintenance (FOUNDATION Fieldbus Communications)
IAP20-F	0517	PSS 2A-1C13 E	Product Specification Sheet
IAP20-T	0216	MI 020-366	I/A Series Pressure Transmitters with HART Communicator
IAP20-T	0816	MI IAP20-T/IGP20-T	Installation, Calibration, Configuration, and Maintenance (HART Communication)
IAP20-T	0517	PSS 2A-1C13 B	Product Specification Sheet
IAP20-V	0716	MI IAP20-V/IGP20-V	Installation, Calibration, Configuration, and Maintenance (1 to 5 V dc Output Signal)
IAP20-V	1116	PSS 2A-1C13 D	Product Specification Sheet
IGP**-F	0216	MI 014-900	Fieldbus Overview
IGP10	0615	DP 020-211	Dimensional Print: Sanitary Gauge Pressure/Level 1 1/2-inch Tri-Clamp
IGP10	0615	DP 020-212	Dimensional Print: Sanitary Gauge or Absolute Level 2-inch Tri-Clamp
IGP10	0615	DP 020-213	Dimensional Print: Sanitary Gauge Pressure/Level 3-inch Tri-Clamp
IGP10	1116	DP 020-214	Dimensional Print: Sanitary Gauge Pressure/Level Mini Tank Spud
IGP10	1116	DP 020-216	Dimensional Print: Sanitary Gauge Pressure/Level Extended Mini Tank Spud
IGP10	0615	DP 020-217	Dimensional Print: Sanitary with Pulp and Paper Process Connections
IGP10	0615	DP 020-218	Dimensional Print: Sanitary with 1 1/2-, 2-, 3-inch Tri-Clamp
IGP10	0615	DP 020-219	Dimensional Print: Sanitary with Mini Tank Spud Seal
IGP10	0215	DP 020-344	Dimensional Print: High Gauge
IGP10	0615	DP 020-447	Dimensional Print: IAP10, IGP10, IAP20, IGP20, IGP25, IGP50
IGP10	0316	MI 020-357	Functional Safety Manual
IGP10	1116	MI 020-358	Safety Information
IGP10	1116	MI 020-359	Universal Instruction Manual
IGP10	0216	MI 020-427	Pressure Transmitters Intrinsic Safety Diagrams and Nonincendive Circuits
IGP10	1016	PL 009-006	Parts List: I/A Series® Electronic Pressure Transmitters
IGP10	1016	PL 009-010	Parts List: High Gauge
IGP10	0616	PSS 2A-1C13 F	Product Specification Sheet: High Gauge Pressure Transmitter
IGP10	0616	PSS 2A-1C13 K	Product Specification Sheet: Sanitary Process Connections
IGP10	0618	PSS 2A-1C13 L	Product Specification Sheet: Process Connections for Pulp and Paper
IGP10	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IGP10-A	0716	MI IAP10-A/IGP10-A	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA)
IGP10-A	0616	PSS 2A-1C13 C	Product Specification Sheet

Pressure Transmitters

Absolute/Gauge

Page 4 of 6

Product	Date	Doc. Num	Title or Description
IGP10-D	0716	MI IAP10-D/IGP10-D	Installation, Calibration, Configuration, and Maintenance (FoxCom Communication)
IGP10-D	0616	PSS 2A-1C13 A	Product Specification Sheet
IGP10-F	0716	MI IAP10-F/IGP10-F	Installation, Calibration, Configuration, and Maintenance (FOUNDATION Fieldbus Communication)
IGP10-F	0517	PSS 2A-1C13 E	Product Specification Sheet
IGP10M	0717	MI 020-608	Models IAP10M, IGP10M, and IDP10M Pressure Transmitters with Modbus Communication
IGP10M	0817	MI 020-607	Models IAP10M, IGP10M, and IDP10M Pressure Transmitters with Modbus Communication - Installation, Operation, Maintenance, and Troubleshooting
IGP10S	0817	DP 020-463	I/A Series® Pressure S Series Transmitters
IGP10S	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
IGP10S	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
IGP10S	0118	MI 020-541	I/A Series® Pressure S Series Transmitters FM/CSA Safety Information
IGP10S	0118	MI 020-542	I/A Series® Pressure S Series Transmitters ATEX/IECEX Safety Information
IGP10S-T	0917	PSS 2A-1Z9 E	I/A Series® Electronic Pressure Transmitters Options and Accessories
IGP10S-T	0917	MI 020-601	IAP10S Absolute Pressure and IGP10S Gauge Pressure with HART Communication - Installation, Operation, Calibration, Configuration, and Maintenance
IGP10S-T	0917	PL 009-025	Foxboro® S Series Pressure Transmitters Model IGP10S Direct Connected Gauge Pressure Transmitter Model IAP10S Direct Connected Absolute Pressure Transmitter
IGP10S-T	0917	PSS 2A-1C13 P	Foxboro® Models IAP10S, IGP10S, and IGP20S Absolute and Gauge Pressure Transmitters with HART® Communication Protocol
IGP10-T	0216	MI 020-366	I/A Series Pressure Transmitters with HART Communicator
IGP10-T	0716	MI IAP10-T/IGP10-T	Installation, Calibration, Configuration, and Maintenance (HART Communication)
IGP10-T	0517	PSS 2A-1C13 B	Product Specification Sheet
IGP10-V	0716	MI IAP10-V/IGP10-V	Installation, Calibration, Configuration, and Maintenance (1 to 5 V dc Output Signal)
IGP10-V	1116	PSS 2A-1C13 D	Product Specification Sheet
IGP20	0615	DP 020-211	Dimensional Print: Sanitary Gauge Pressure/Level 1 1/2-inch Tri-Clamp
IGP20	0615	DP 020-212	Dimensional Print: Sanitary Gauge or Absolute Level 2-inch Tri-Clamp
IGP20	0615	DP 020-213	Dimensional Print: Sanitary Gauge Pressure/Level 3-inch Tri-Clamp
IGP20	1116	DP 020-214	Dimensional Print: Sanitary Gauge Pressure/Level Mini Tank Spud
IGP20	1116	DP 020-216	Dimensional Print: Sanitary Gauge Pressure/Level Extended Mini Tank Spud
IGP20	0615	DP 020-217	Dimensional Print: Sanitary with Pulp and Paper Process Connections
IGP20	0615	DP 020-218	Dimensional Print: Sanitary with 1 1/2-, 2-, 3-inch Tri-Clamp

Pressure Transmitters

Absolute/Gauge

Page 5 of 6

Product	Date	Doc. Num	Title or Description
IGP20	0615	DP 020-219	Dimensional Print: Sanitary with Mini Tank Spud Seal
IGP20	0615	DP 020-447	Dimensional Print: IAP10, IGP10, IAP20, IGP20, IGP25, IGP50
IGP20	0316	MI 020-357	Functional Safety Manual
IGP20	1116	MI 020-358	Safety Information
IGP20	1116	MI 020-359	Universal Instruction Manual
IGP20	0216	MI 020-427	Pressure Transmitters Intrinsic Safety Diagrams and Nonincendive Circuits
IGP20	1116	PL 009-007	Parts List
IGP20	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IGP20-A	0716	MI IAP20-A/IGP20-A	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA)
IGP20-A	0616	PSS 2A-1C13 C	Product Specification Sheet
IGP20-D	0716	MI IAP20-D/IGP20-D	Installation, Calibration, Configuration, and Maintenance (FoxCom Communication)
IGP20-D	0616	PSS 2A-1C13 A	Product Specification Sheet
IGP20-F	0716	MI IAP20-F/IGP20-F	Installation, Calibration, Configuration, and Maintenance (FOUNDATION Fieldbus Communication)
IGP20-F	0517	PSS 2A-1C13 E	Product Specification Sheet
IGP20-T	0216	MI 020-366	I/A Series Pressure Transmitters with HART Communicator
IGP20-T	0816	MI IAP20-T/IGP20-T	Installation, Calibration, Configuration, and Maintenance (HART Communication)
IGP20-T	0517	PSS 2A-1C13 B	Product Specification Sheet
IGP20-V	0716	MI IAP20-V/IGP20-V	Installation, Calibration, Configuration, and Maintenance (1 to 5 V dc Output Signal)
IGP20-V	1116	PSS 2A-1C13 D	Product Specification Sheet
IGP25	0615	DP 020-447	Dimensional Print: IAP10, IGP10, IAP20, IGP20, IGP25, IGP50
IGP25	1116	MI 020-358	Safety Information
IGP25	1116	MI 020-359	Universal Instruction Manual
IGP25	0216	MI 020-427	Pressure Transmitters Intrinsic Safety Diagrams and Nonincendive Circuits
IGP25	1016	PL 009-011	Parts List: I/A Series® Multirange Pressure Transmitters
IGP25	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IGP25-F	0816	MI IGP25-F/IGP50-F	Installation, Calibration, Configuration, and Maintenance (FOUNDATION Fieldbus Communication)
IGP25-F	0816	PSS 2A-1C13 G	Product Specification Sheet
IGP25-F	0816	PSS 2A-1C13 M	Product Specification Sheet: Sanitary Process Connections
IGP25-F	0816	PSS 2A-1C13 N	Product Specification Sheet: Pulp and Paper Process Connections
IGP25-T	0816	MI IGP25-T/IGP50-T	Installation, Calibration, Configuration, and Maintenance (HART Communication)

Pressure Transmitters

Absolute/Gauge

Page 6 of 6

Product	Date	Doc. Num	Title or Description
IGP25-T	0216	MI 020-366	I/A Series Pressure Transmitters with HART Communicator
IGP25-T	0816	PSS 2A-1C13 G	Product Specification Sheet
IGP25-T	0816	PSS 2A-1C13 M	Product Specification Sheet: Sanitary Process Connections
IGP25-T	0816	PSS 2A-1C13 N	Product Specification Sheet: Pulp and Paper Process Connections
IGP50	0615	DP 020-447	Dimensional Print: IAP10, IGP10, IAP20, IGP20, IGP25, IGP50
IGP50	1116	MI 020-358	Safety Information
IGP50	1116	MI 020-359	Universal Instruction Manual
IGP50	0216	MI 020-427	Pressure Transmitters Intrinsic Safety Diagrams and Nonincendive Circuits
IGP50	1016	PL 009-012	Parts List
IGP50	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IGP50-D	0216	MI 020-366	I/A Series Pressure Transmitters with HART Communicator
IGP50-D	0816	PSS 2A-1C13 H	Product Specification Sheet
IGP50-F	0816	MI IGP25-F/IGP50-F	Installation, Calibration, Configuration, and Maintenance (FOUNDATION Fieldbus Communication)
IGP50-F	0816	PSS 2A-1C13 H	Product Specification Sheet
IGP50-T	0816	MI IGP25-T/IGP50-T	Installation, Calibration, Configuration, and Maintenance (HART Communication)
IGP50-T	0216	MI 020-366	I/A Series Pressure Transmitters with HART Communicator
IGP50-T	0816	PSS 2A-1C13 H	Product Specification Sheet
IGP60G	0216	MI 020-600	Installation, Operation, Calibration, Configuration, and Maintenance
IGP60G	0216	MI 020-540	Safety Information
IGP60G	1016	PSS 2A-1C18 A	Product Specification Sheet
IGP60G	0216	DP 020-600	Dimensional Print

Pressure Transmitters

Pressure Seals

Page 1 of 2

Product	Date	Doc. Num	Title or Description
PSFAD	0216	DP 020-346	Dimensional Print
PSFAD	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSFAD	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSFAR	1212	DP 020-345	Dimensional Print
PSFAR	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSFAR	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSFES	0216	DP 020-343	Dimensional Print
PSFES	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSFES	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSFFD	0216	DP 020-357	Dimensional Print
PSFFD	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSFFD	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSFFR	0216	DP 020-356	Dimensional Print
PSFFR	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSFFR	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSFLT	0316	DP 020-342	Dimensional Print
PSFLT	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSFLT	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSFPS	0216	DP 020-343	Dimensional Print
PSFPS	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSFPS	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSISD	0216	DP 020-350	Dimensional Print
PSISD	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSISD	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSISR	0216	DP 020-349	Dimensional Print
PSISR	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSISR	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSSCR	1101	DP 020-351	Dimensional Print
PSSCR	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSSCR	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSSCT	0403	DP 020-355	Dimensional Print
PSSCT	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSSCT	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSSSR	0705	DP 020-353	Dimensional Print
PSSSR	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSSSR	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters

Pressure Transmitters

Pressure Seals

Page 2 of 2

Product	Date	Doc. Num	Title or Description
PSSST	0705	DP 020-354	Dimensional Print
PSSST	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSSST	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSTAD	0216	DP 020-348	Dimensional Print
PSTAD	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSTAD	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters
PSTAR	1212	DP 020-347	Dimensional Print
PSTAR	0817	MI 020-369	Pressure Seals for Use with I/A Series Pressure Transmitters
PSTAR	0917	PSS 2A-1Z11 A	Pressure Seals for Use with I/A Series® Pressure Transmitters

Pressure Transmitters

Pneumatic-to-Current Converters

Product	Date	Doc. Num	Title or Description
IPI10-A	0316	DP 020-414	Dimensional Print
IPI10-A	0216	MI 020-414	Installation, Calibration, Configuration, and Maintenance
IPI10-A	0516	PL 009-144	Parts List: Pneumatic-to-Current Converter
IPI10-A	0616	PSS 2A-2A4 A	IPI10 Series Pneumatic-to-Current Converter

Pressure Transmitters

Multivariable

Product	Date	Doc. Num	Title or Description
IMV25	0216	DP 020-432	Dimensional Print
IMV25	1116	MI 020-358	Safety Information
IMV25	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IMV25-M	0216	MI 020-384	Installation, Calibration, Configuration, and Maintenance (Modbus Communications and PCMM Field Device Configurator)
IMV25-M	0316	PL 009-019	Parts List
IMV25-M	1116	PSS 2A-1C15 D	Product Specification Sheet
IMV25-T	0216	MI 020-382	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA HART)
IMV25-T	0316	PL 009-019	Parts List
IMV25-T	1116	PSS 2A-1C15 B	Product Specification Sheet
IMV30	0216	DP 020-432	Dimensional Print
IMV30	1116	MI 020-358	Safety Information
IMV30	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IMV30-T	0216	MI 020-382	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA HART)
IMV30-T	0216	PL 009-018	Parts List
IMV30-T	1116	PSS 2A-1C15 A	Product Specification Sheet
IMV31	0216	DP 020-432	Dimensional Print
IMV31	0917	PSS 2A-1Z9 E	I/A Series Electronic Pressure Transmitters Options and Accessories
IMV31	0217	TI 037-098	Using IMV31 for Boiler Drum Level Applications
IMV31-T	0216	MI 020-383	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA HART)
IMV31-T	0216	PL 009-020	Parts List
IMV31-T	1116	PSS 2A-1C15 C	Product Specification Sheet

Pressure Transmitters

Other

Page 1 of 2

Product	Date	Doc. Num	Title or Description
	0913	MI 020-328	Bubble Tube Installation for Measurement
	1215	MI 020-360	Wiring Guidelines for Foundation Fieldbus Transmitters
	0216	MI 022-138	1-, 2-, 3-, and 5-Valve Manifolds For Use with I/A Series Pressure Transmitter Family
	0715	PSS 3-2A1 A	Product Specification Sheet: Pressure and Receiver Elements
	0216	PSS 3-2C1 A	Product Specification Sheet: Pressure Seals
	0216	TI 37-75b	Technical Information - Material Selection Guide
	0216	TI 037-097	Technical Information - Process Sealing of Transmitters for use in Class I, Zone 0, 1, and 2 Hazardous Locations
13DEMP	0315	PL 006-180	Parts List: Transmitter with Matched Extended Pressure Seals
13DMP	0315	PL 006-180	Parts List: Transmitter with Matched Pressure Seals
13F	0315	PL 006-178	Parts List: Liquid Level or Density Styles C and D
13FE	0315	PL 006-178	Parts List: Liquid Level or Density Styles E and F
D0170MB to D0170MJ	0598	MI 020-412	Mounting Hardware Kits to Replace 823DP, 843DP and 863DP with IDP10
HHT	0197	MI 020-400	Pocket Guide with I/A Series Pressure Transmitters
MB3	0216	DP 022-148	Dimensional Print: 3-Valve Manifolds
MB3	0216	PL 006-152	Parts List: 3-Valve Manifold
MB3	0216	PSS 2B-1Z2 A	Product Specification Sheet: 3-Valve Manifolds
MB5G	0216	DP 022-149	Dimensional Print: 5-Valve Manifold
MB5G	0216	PL 006-152	Parts List: 5-Valve Manifold
MB5G	0216	PSS 2B-1Z2 A	Product Specification Sheet: 5-Valve Manifolds
MB5P	0216	DP 022-149	Dimensional Print: 5-Valve Manifold
MB5P	0216	PL 006-152	Parts List: 5-Valve Manifold
MB5P	0216	PSS 2B-1Z2 A	Product Specification Sheet: 5-Valve Manifolds
MH	0517	PL 002-101	Parts List: Pressure Gauges
M4A	0216	DP 022-148	Dimensional Print: 3-Valve Manifold
M4A	0216	PL 006-152	Parts List: 3-Valve Manifold
M4A	0216	PSS 2B-1Z2 A	Product Specification Sheet: 3-Valve Manifolds
M4AP	0216	DP 022-147	Dimensional Print: 2-Valve Manifold
M4AP	0216	PL 006-152	Parts List: 2-Valve Manifold
M4AP	0216	PSS 2B-1Z2 A	Product Specification Sheet: 2-Valve Manifolds

Pressure Transmitters

Other

Page 2 of 2

Product	Date	Doc. Num	Title or Description
M4T	0216	DP 022-148	Dimensional Print: 3-Valve Manifold
M4T	0216	PL 006-152	Parts List: 3-Valve Manifold
M4T	0216	PSS 2B-1Z2 A	Product Specification Sheet: 3-Valve Manifolds
M4TP	0216	DP 022-147	Dimensional Print: 2-Valve Manifold
M4TP	0216	PL 006-152	Parts List: 2-Valve Manifold
M4TP	0216	PSS 2B-1Z2 A	Product Specification Sheet: 2-Valve Manifolds
M6T	0216	DP 022-149	Dimensional Print: 5-Valve Manifold
M6T	0216	PL 006-152	Parts List: 5-Valve Manifold
M6T	0216	PSS 2B-1Z2 A	Product Specification Sheet: 5-Valve Manifolds
M6TA	0216	DP 022-149	Dimensional Print: 5-Valve Manifold
M6TA	0216	PL 006-152	Parts List: 5-Valve Manifold
M6TA	0216	PSS 2B-1Z2 A	Product Specification Sheet: 5-Valve Manifolds
M9	0216	DP 022-146	Dimensional Print: 1-Valve Manifold (Block and Bleed Valve)
M9	0216	PL 006-152	Parts List: 1-Valve Manifold (Block and Bleed Valve)
M9	0216	PSS 2B-1Z2 A	Product Specification Sheet: 2-Valve Manifolds
M24A	0216	DP 022-149	Dimensional Print: 5-Valve Manifold
M24A	0216	PL 006-152	Parts List: 5-Valve Manifold
M24A	0216	PSS 2B-1Z2 A	Product Specification Sheet: 5-Valve Manifolds
M24T	0216	DP 022-149	Dimensional Print: 5-Valve Manifold
M24T	0216	PL 006-152	Parts List: 5-Valve Manifold
M24T	0216	PSS 2B-1Z2 A	Product Specification Sheet: 5-Valve Manifolds
M25	0216	DP 022-147	Dimensional Print: 2-Valve Manifold
M25	0216	PL 006-152	Parts List: 2-Valve Manifold
M25	0216	PSS 2B-1Z2 A	Product Specification Sheet: 2-Valve Manifolds
PTM	0216	DP 022-147	Dimensional Print: 2-Valve Manifold
PTM	0216	PL 006-152	Parts List: 2-Valve Manifold
PTM	0216	PSS 2B-1Z2 A	Product Specification Sheet: 2-Valve Manifolds
PT7	0216	DP 022-147	Dimensional Print: 2-Valve Manifold
PT7	0216	PL 006-152	Parts List: 2-Valve Manifold
PT7	0216	PSS 2B-1Z2 A	Product Specification Sheet: 2-Valve Manifolds

Remote Configurators

Product	Date	Doc. Num	Title or Description
	0801	B0193XX	Field Device Integration Checklist
HHT50	0816	MI 020-500	Configurator for use with Intelligent Field Devices
HHT50	0216	PL 009-154	Parts List: use with Intelligent Field Devices
HHT50	0209	PSS 2A-1Z3 L	Product Specification Sheet: use with Intelligent Field Devices
PC20	1010	MI 020-495	Intelligent Field Device Configurator
PC20	0216	PL 009-156	Parts List
PC20	0216	PSS 2A-1Z3 E	Product Specification Sheet
PC50	0108	MI 020-501	Field Device Tool - Installation and Parts List
PC50	0216	MI 020-504	Field Device Tool - Operation Using FoxCom Communication Protocol
PC50	0216	MI 020-505	Field Device Tool - Operation Using HART Communication Protocol
PC50	1217	MI 020-520	Field Device Tool with Advanced DTM Library - Operation Using HART Communications Protocol
PC50	0216	PSS 2A-1Z3 G	Product Specification Sheet
	0216	MI 019-276	Advanced DTM Library - Operation Using MODBUS Communication Protocol
	1217	MI 019-275	Advanced DTM Library - Operation Using FOUNDATION Fieldbus Communications Protocol
PCMM	0216	MI 020-384	Installation, Calibration, Configuration, and Maintenance (Used with IMV25-M Modbus Communications)
PCMM	0216	PL 009-158	Parts List: used with IMV225-M
PCMM	0216	PSS 2A-1Z3 H	Product Specification Sheet: used with IMV25-M
PCMV	1104	MI 020-496	Intelligent Field Device Configurator for IMV25 and IMV30 Multivariable Transmitters
PCMV	0809	MI 020-497	Intelligent Field Device Configurator for IMV31 Multivariable Transmitters
PCMV	0216	PL 009-157	Parts List: used with IMV25, IMV30 and IMV31
PCMV	0216	PSS 2A-1Z3 F	Product Specification Sheet: used with IMV25, IMV30 and IMV31

Temperature

Page 1 of 3

Product	Date	Doc. Num	Title or Description
12A	0606	PL 006-330	Parts List
12A	0201	PSS 2B-1B1 A	Product Specification Sheet
MT	0316	DP 016-130	Dimensional Print
MT	0316	MI 016-128	MINOX Thermocouples Style B
MT	0216	PL 008-108	Parts List
MT	0216	PSS 1-1B6 A	Product Specification Sheet
PR	0316	DP 016-131	Dimensional Print
PR	0316	MI 016-131	Platinum Resistance Temperature Detectors (RTD) Style C
PR	0216	PL 008-111	Parts List
PR	0215	PSS 1-1B1 A	Product Specification Sheet
PRMTA	0216	PL 008-681	Parts List
PRMTA	0216	PSS 3-3E1 A	Product Specification Sheet
RTT15	0716	DP 020-462	Dimensional Print: Model RTT15 Temperature Transmitters
RTT15	0216	MI 020-449	RTT15 I/A Series® Temperature Transmitter Intrinsic Safety Connection Diagrams
RTT15-F	0216	MI 020-462	Model RTT15-F with FOUNDATION Fieldbus Protocol and Model RTT15-P with PROFIBUS® Protocol
RTT15-F	0818	PL 008-662	Parts List: Model RTT15 with HART, FOUNDATION Fieldbus, or PROFIBUS Communication Protocol
RTT15-F	0316	PSS 2A-1F5 A	Product Specification Sheet: Model RTT15 I/A Series Temperature Transmitters with HART, FOUNDATION Fieldbus, or PROFIBUS Protocol
RTT15-H	0216	MI 020-463	Model RTT15-H with HART® 7 Protocol and Model RTT15-T with HART 5 Protocol
RTT15-H	0818	PL 008-662	Parts List: Model RTT15 I/A Series Temperature Transmitters with HART, FOUNDATION Fieldbus, or PROFIBUS Protocol
RTT15-H	0316	PSS 2A-1F5 A	Product Specification Sheet: Model RTT15 I/A Series Temperature Transmitters with HART, FOUNDATION Fieldbus, or PROFIBUS Protocol
RTT15-P	0216	MI 020-462	Model RTT15-F with FOUNDATION Fieldbus Protocol and Model RTT15-P with PROFIBUS® Protocol
RTT15-P	0818	PL 008-662	Parts List: Model RTT15 I/A Series Temperature Transmitters with HART, FOUNDATION Fieldbus, or PROFIBUS Protocol
RTT15-P	0316	PSS 2A-1F5 A	Product Specification Sheet: Model RTT15 I/A Series Temperature Transmitters with HART, FOUNDATION Fieldbus, or PROFIBUS Protocol
RTT15-T	0216	MI 020-463	Model RTT15-H with HART® 7 Protocol and Model RTT15-T with HART 5 Protocol
RTT15-T	0818	PL 008-662	Parts List: Model RTT15 with HART, FOUNDATION Fieldbus, or PROFIBUS Communication Protocol

Temperature

Page 2 of 3

Product	Date	Doc. Num	Title or Description
RTT15-T	0316	PSS 2A-1F5 A	Product Specification Sheet: Model RTT15 I/A Series Temperature Transmitters with HART, FOUNDATION Fieldbus, or PROFIBUS Protocol
RTT15S	1017	DP 020-470	Dimensional Print: Model RTT15S Optical Temperature Transmitter OTTPlus
RTT15S	0618	MI 020-523	Optical Temperature Transmitter OTTPlus Installation, Startup, Troubleshooting, and Maintenance
RTT15S	1016	MI 020-524	Model RTT15S Optical Temperature Transmitter OTTPlus Safety Information
RTT15S	0618	PL 008-663	Parts List: Model RTT15S Optical Temperature Transmitter OTTPlus
RTT15S	0618	PSS 2A-1F5 B	Product Specification Sheet: Model RTT15S Optical Temperature Transmitter OTTPlus
RTT20	0316	DP 020-460	Dimensional Print: I/A Series® Temperature Transmitters Model RTT20
RTT20	0216	MI 020-453	RTT20 I/A Series® Temperature Transmitter Installation, Configuration, Operation, Calibration, and Maintenance
RTT20	1215	MI 020-454	RTT20 I/A Series® Temperature Transmitter Intrinsic Safety Connection Diagrams
RTT20	1215	MI 020-460	RTT20 I/A Series® Temperature Transmitter Operation, Configuration, and Calibration Using a HART Communicator
RTT20	0316	MI 020-461	I/A Series® Model RTT20 Temperature Transmitter Configuration Menu Flowchart for 1-Line LCD Indicator/Configurator
RTT20	0398	MI 020-469	Operation, Calibration, and Configuration Using HHT
RTT20	0316	PL 008-659	Parts List
RTT20	0216	PSS 2A-1F4 A	Product Specification Sheet
RTT20	0216	PSS 2A-1Z9 F	Models RTT20 and RTT25 Options and Accessories
RTT25-F	0108	DP 020-461	Dimensional Print
RTT25-F	0216	MI 014-900	Fieldbus Overview
RTT25-F	0207	MI 020-488	Installation, Calibration, Local/Remote Configuration and Maintenance
RTT25-F	0316	PL 008-661	Parts List
RTT25-F	1112	PSS 2A-1F4 C	Product Specification Sheet
RTT25-F	0216	PSS 2A-1Z9 F	Models RTT20 and RTT25 Options and Accessories
RTT30	0216	DP 020-530	Dimensional Print
RTT30	0815	MI 020-530	I/A Series Temperature Transmitter with HART Protocol
RTT30	0216	MI 020-531	Temperature Transmitter Safety Information
RTT30	0110	MI RTT30	FM and CSA Safety Drawings
RTT30-A	0216	PSS 2A-1F6 A	Product Specification Sheet: HART Communications
RTT30-F	0216	PSS 2A-1F6 B	Product Specification Sheet: FOUNDATION Fieldbus Communications
RTT30	0216	MI 020-532	I/A Series Temperature Transmitter with Foundation Fieldbus Protocol
RTT80	0818	PSS 2A-1F8 A	Temperature Transmitter with HART® 7 Communication Protocol and Optional SIL Certification
RTT80	0818	PSS 2A-1F8 B	Product Specification Sheet: Foundation Fieldbus Communications

Temperature

Page 3 of 3

Product	Date	Doc. Num	Title or Description
RTT80	0818	PL 008-680	Model RTT80 I/A Series® Temperature Transmitter
RTT80	0216	MI 020-580	FM/CSA Safety Information
RTT80	0216	MI 020-581	ATEX/IECEx Safety Information
RTT80	1114	MI 020-582	RTT80 with HART Protocol
RTT80	0815	MI 020-583	Model RTT80-F with Foundation Fieldbus Protocol
RTT80	0417	MI 020-584	Functional Safety Manual
RTT80	0615	MI 020-585	With HART® 7 Protocol and Optional SIL Certification
RTT80	0316	DP 020-580	Dimensional Print

Temperature

Thermowells

Product	Date	Doc. Num	Title or Description
TF	0216	DP 002-110	Dimensional Print: Flanged Thermowells
TF	0216	PSS 3-3D1 A	Product Specification Sheet: Flanged Thermowells
TS	0216	DP 002-111	Dimensional Print: Sanitary Thermowells
TS	0216	PSS 3-3D1 A	Product Specification Sheet: Sanitary Thermowells
TT	0216	DP 002-112	Dimensional Print: Threaded Thermowells
TT	0216	PSS 3-3D1 A	Product Specification Sheet: Threaded Thermowells
TW	0216	DP 002-113	Dimensional Print: Weld-In Thermowells
TW	0216	PSS 3-3D1 A	Product Specification Sheet: Weld-In Thermowells

Vortex

Page 1 of 3

Product	Date	Doc. Num	Title or Description
83	0409	B0800AB	Ensuring Premium Performance with Foxboro Intelligent Vortex Flowmeters
83	0908	MI 019-191	Amplifier Replacement for Conventional and Intelligent Vortex Flowmeters
83	0117	MI 019-179	Flow Safety Information
83	0403	MI 019-188	Conversion from Analog, FoxCom, or HART to FOUNDATION Fieldbus - Kit Numbers K0147VN and K0148VN
83	1117	MI 019-198	Addition or Replacement of Digital Display/Configurator: Kits K0147EK, K0147HT, and K0147HU
83	0216	MI 019-209	Sensor Replacement Kits
83*-F	0216	MI 014-900	Fieldbus Overview
83F	0416	DP 019-150	Dimensional Print: Single Measurement Configuration
83F	0216	DP 019-151	Dimensional Print: Dual Measurement Configuration
83F	1117	MI 019-145	Universal Instruction Manual - Installation and Startup
83F	0297	MI 019-197	Convert Integral to Remote
83F-A	1117	MI 019-189	Installation, Troubleshooting, and Maintenance
83F-A	1117	PL 008-708	Parts List
83F-A	1017	PSS 1-8A1 D	Product Specification Sheet
83F-F	1117	PL 008-708	Parts List
83S	0216	DP 019-154	Dimensional Print: Sanitary
83S	1117	MI 019-145	Universal Instruction Manual - Installation and Startup
83S-A	1117	MI 019-173	Sanitary Installation, Troubleshooting, and Maintenance
83S-A	1117	PL 008-713	Parts List
83S-A	1017	PSS 1-8A2 E	Product Specification Sheet
83W	0216	DP 019-152	Dimensional Print: Wafer Body
83W	1117	MI 019-145	Universal Instruction Manual - Installation and Startup
83W	0297	MI 019-197	Convert Integral to Remote
83W-A	1117	MI 019-189	Installation, Troubleshooting, and Maintenance
83W-A	1117	PL 008-708	Installation, Troubleshooting, and Maintenance
83W-A	1117	PL 008-709	Parts List
83W-A	1017	PSS 1-8A1 D	Product Specification Sheet
83W-D	1117	MI 019-198	Addition of Digital Display and Configuration
83W-D	1117	PL 008-709	Parts List
83W-F	1117	PL 008-709	Parts List
83W-T	1117	PL 008-709	Parts List
84	0316	B0800AJ	Ensuring Premium Performance with Foxboro Intelligent Vortex Flowmeters
84	0716	MI 019-146	Universal Instruction Manual - Installation and Startup
84	1216	MI 019-177	FM and CSA Certification Connection Diagrams
84	0117	MI 019-179	Flow Safety Information

Vortex

Page 2 of 3

Product	Date	Doc. Num	Title or Description
84	0216	MI 019-209	Sensor Replacement Kits
84C	0218	DP 019-127	Foxboro® Model 84C Vortex Flowmeters
84C	1216	MI 019-222	Foxboro® Model 84C Vortex Flowmeter with HART Communication - Installation, Operation, and Maintenance
84C	1116	PL 008-754	Foxboro® Model 84C Vortex Flowmeters Flanged Body Flowmeters
84C	1116	PL 008-755	Foxboro® Model 84C Vortex Flowmeters Wafer Body Flowmeters
84C	0118	PSS 1-8A8 A	Foxboro® Model 84C Flanged Body Intelligent Vortex Flowmeters
84C	1217	MI 019-223	Model 84C Intelligent Vortex Flowmeter Sensor Replacement Kits
84F	0517	DP 019-120	Dimensional Print: Single Measurement Configuration
84F	0416	DP 019-121	Dimensional Print: Dual Measurement Configuration
84F	0218	DP 019-125	Dimensional Print: Single Measurement Configuration
84F	0216	MI 019-221	Model 83 to 84 I/A Series® Intelligent Vortex Flowmeter Conversion Kit Installation Procedure
84F	0218	DP 019-126	Dimensional Print: Dual Measurement Configuration
84F	0118	PSS 1-8A7 A	Product Specification Sheet
84F	0316	TI 027-070	Model 83 to 84 I/A Series® Intelligent Vortex Flowmeter Conversion Kit Ordering Instructions
84F-L	0117	MI 019-211	Low Power with HART - Installation, Operation, and Maintenance
84F-L	0117	PL 008-714	Parts List: Low Power with Pulse Output
84F-L	0117	PL 008-753	Parts List: (Style B) Flanged Body Flowmeters
84F-M	0117	MI 019-211	Low Power with HART - Installation, Operation, and Maintenance
84F-M	0117	PL 008-714	Parts List: Low Power without Pulse Output
84F-M	0117	PL 008-753	Parts List: (Style B) Flanged Body Flowmeters
84F-T	0117	MI 019-202	Intelligent Vortex Flowmeter with HART - Installation, Operation, and Maintenance
84F-T	0117	PL 008-714	Parts List: Pulse Output
84F-T	0117	PL 008-753	Parts List: (Style B) Flanged Body Flowmeters
84F-U	0117	MI 019-202	Intelligent Vortex Flowmeter with HART - Installation, Operation, and Maintenance
84F-U	0117	PL 008-714	Parts List: without Pulse Output
84F-U	0117	PL 008-753	Parts List: (Style B) Flanged Body Flowmeters
84S	0216	DP 019-123	Dimensional Print: Sanitary
84S	0117	PSS 1-8A5 A	Product Specification Sheet
84S-L	0117	MI 019-214	Low Power with HART - Installation, Operation, Troubleshooting, and Maintenance
84S-L	0117	PL 008-717	Parts List: Low Power with Pulse Output

Vortex

Page 3 of 3

Product	Date	Doc. Num	Title or Description
84S-M	0117	MI 019-214	Low Power with HART - Installation, Operation, Troubleshooting, and Maintenance
84S-M	0117	PL 008-717	Parts List: Low Power without Pulse Output
84S-T	0117	MI 019-205	with HART - Installation, Operation, Troubleshooting, and Maintenance
84S-T	0117	PL 008-717	Parts List: Pulse Output
84S-U	0117	MI 019-205	with HART - Installation, Operation, Troubleshooting, and Maintenance
84S-U	0117	PL 008-717	Parts List: without Pulse Output
84W-L	0117	PL 008-714	Parts List: Low Power with Pulse Output
84W	0216	MI 019-221	Model 83 to 84 I/A Series® Intelligent Vortex Flowmeter Conversion Kit Installation Procedure
84W	0216	DP 019-122	Dimensional Print: Wafer Body
84W	0117	PSS 1-8A3 A	Product Specification Sheet
84W	0316	TI 027-070	Model 83 to 84 I/A Series® Intelligent Vortex Flowmeter Conversion Kit Ordering Instructions
84W-L	0117	MI 019-211	Low Power with HART - Installation, Operation, and Maintenance
84W-M	0117	MI 019-211	Low Power with HART - Installation, Operation, and Maintenance
84W-M	0117	PL 008-714	Parts List: Low Power without Pulse Output
84W-T	0117	MI 019-202	Intelligent Vortex Flowmeter with HART - Installation, Operation, and Maintenance
84W-T	0117	PL 008-714	Parts List: Pulse Output
84W-U	0117	MI 019-202	Intelligent Vortex Flowmeter with HART - Installation, Operation, and Maintenance
84W-U	0117	PL 008-714	Parts List: without Pulse Output
E83	0908	MI 019-191	Amplifier Replacement for Conventional and Intelligent Vortex Flowmeters
E83F	0398	MI 019-166	Sensor/Amplifier Replacement
E83FA	1117	MI 019-189	Installation, Troubleshooting, and Maintenance
E83L	0398	MI 019-166	Sensor/Amplifier Replacement
E83W	0398	MI 019-166	Sensor/Amplifier Replacement
E83WA	1117	MI 019-189	Installation, Troubleshooting, and Maintenance

Other

Totalizer and Flow Computer

Product	Date	Doc. Num	Title or Description
75LBA	1193	DP 019-543	Dimensional Print
75LBA	0298	MI 019-589	Pulse Input Liquid Batch Totalizer
75LBA	0398	MI 019-590	Analog Input Liquid Batch Totalizer
75LBA	1193	PL 008-727	Parts List
75LBA	1093	PSS 1-9C1 A	Product Specification Sheet
75MCA	0794	DP 019-542	Dimensional Print
75MCA	0398	MI 019-591	Pulse Input Liquid Mass Computer
75MCA	0498	MI 019-592	Analog Input Liquid Mass Computer
75MCA	0598	MI 019-594	Pulse Input Gas/Steam Mass Computer
75MCA	0598	MI 019-595	Analog Input Gas/Steam Mass Computer
75MCA	0794	PL 008-728	Parts List
75MCA	0397	PSS 1-9D1 A	Product Specification Sheet
75RTA	0794	DP 019-542	Dimensional Print
75RTA	0298	MI 019-587	Pulse Input Ratemeter Totalizer
75RTA	0298	MI 019-588	Analog Input Ratemeter Totalizer
75RTA	0393	PSS 1-9B1 A	Product Specification Sheet

Other

Positioners and I/P Converters

Product	Date	Doc. Num	Title or Description
E69F	0506	DP 018-430	Dimensional Print
E69F	0610	MI 018-429	Current-to-Pneumatic Converter - Safety Information
E69F	0605	MI 018-430	Current-to-Pneumatic Converter - Field Mounted
E69F	0906	PL 008-645	Parts List
E69F	0115	PSS 2B-2A3 B	Product Specification Sheet
E69P	0506	DP 018-440	Dimensional Print
E69P	0610	MI 018-429	Current-to-Pneumatic Valve Positioner - Safety Information
E69P	0185	MI 018-440	Current-to-Pneumatic Valve Positioner
E69P	0711	PL 008-647	Parts List
E69P	0115	PSS 4-10A2 A	Product Specification Sheet
E69R	0802	PL 008-646	Parts List
E69R	0407	PSS 2B-2A2 A	Product Specification Sheet
P91PA	0711	PL 005-365	Parts List: Poweractor
P91PA	0693	PSS 4-10A1 B	Parts List: Poweractor Power Positioner
P91T	0706	DP 014-132	Dimensional Print
P91T	0802	MI 014-132	Type CP Pneumatic Position Transmitter
P91T	0802	PL 006-320	Parts List
P91T	0104	PSS 2B-1B1 B	Product Specification Sheet
P91V	0802	DP 012-340	Dimensional Print
P91V	0802	MI 012-340	Type C Vernier VALVACTOR - Yoke Mounted
P91V	0802	PL 005-320	Parts List

Other

Miscellaneous

Page 1 of 2

Product	Date	Doc. Num	Title or Description
	0902	MI 014-101	Sulfur Detection Using Lead Acetate Test Paper
	0813	PL 001-110	Chart Drives - Parts List
	0117	PL 008-320	Parts Lists - Electric Contact Movements, Relays, and Terminal Blocks
	0816	TI 037-094	Quality Assurance Certificates for Non-Nuclear Parts and Products
	1116	TI 005-101	Technical Information: Factory Mutual Approved Intrinsically Safe Apparatus, Associated Apparatus, and Equipment with Nonincendive Field Wiring Connections
	1016	TI 005-105	Canadian Standards Association (CSA) Certified Intrinsically Safe Apparatus, Associated Apparatus, and Equipment with Nonincendive Field Wiring Connections
B0110AS	0715	PL 005-420	Parts Lists - Air Filter Set
B0110AT	0715	PL 005-420	Parts Lists - Air Filter Set
B0110ZA	0715	PL 005-420	Parts Lists - Air Filter Set
B0123HE	0715	PL 005-420	Parts Lists - Adjustable Pressure Regulator with Filter
B0123HE	1013	MI 011-157	B0123HF and B0123HE Pressure Regulators and B1279UL Air Filter
B0123HF	0715	PL 005-420	Parts Lists - Adjustable Pressure Regulator without Filter
B0123HF	1013	MI 011-157	B0123HF and B0123HE Pressure Regulators and B1279UL Air Filter
B0197BA	0715	PL 005-420	Parts Lists - Air Filter Assembly
B1278HE	0506	DP 011-159	Dimensional Print: Adjustable Pressure Regulator
B1278HE	0715	PL 005-420	Parts Lists - Adjustable Pressure Regulator
B1279UL	1013	MI 011-157	B0123HF and B0123HE Pressure Regulators and B1279UL Air Filter
B1279UL	0715	PL 005-420	Parts Lists - Adjustable Pressure Regulator
CO	0316	DP 022-335	Dimensional Print: Compact Orifice with d/p Cell Transmitters
CO	0316	MI 022-335	Compact Orifice with d/p Cell Transmitters
CO	0216	PL 006-172	Parts List: Compact Orifice with d/p Cell Transmitters
CO	0216	PSS 3-5A1 E	Product Specification Sheet: Compact Orifice with d/p Cell Transmitters
IFOA	0216	MI 022-333	Integral Flow Orifice Assembly
IFOA	0216	PL 006-174	Parts List: Integral Flow Orifice Assembly
IFOA	0216	PSS 3-5A1 B	Integral Flow Orifice Assembly used with d/p Cell Transmitter
MAC	0802	PL 005-356	Air Cylinders - Parts List
PF100AX	1003	MI 018-180	75 V dc Multiloop Power Supply
P0300CQ	1003	MI 018-180	75 V dc Multiloop Power Supply
14A	0714	PL 003-525	Pneumatic Flow Integrator - Parts List
17BS	0315	PL 006-318	Side Mounted Buoyancy Transmitter - Parts List
17BT	0315	PL 006-318	Top Mounted Buoyancy Transmitter - Parts List
556	0410	MI 017-284	Pneumatic Analog Computer - Maintenance and Servicing
556	0115	PL 006-345	Pneumatic Analog Computer - Parts List

Other**Miscellaneous****Page 2 of 2**

Product	Date	Doc. Num	Title or Description
557	0115	PL 006-346	Pneumatic Square Root Extractor - Parts List
2761	0908	PL 008-102	Mechanical DEWCEL - Parts List
2761	0908	PSS 1-5A1 A	Mechanical DEWCEL - Product Specification Sheet
2781	0908	DP 008-103	Electrical DEWCEL Element - Dimensional Print
2781	0908	MI 003-318	Dew Point Measurement with DEWCEL Element - Electrical Temperature Measurement
2781	0908	PL 008-102	Electrical DEWCEL, Basic Sensor - Parts List
2781	0908	PSS 1-5A1 A	Electrical DEWCEL - Product Specification Sheet

MSDS/SDS Index

Page 1 of 3

Product	Date	Doc. Num	Title or Description
Various	1115	MSDS 010	Recorders - Type 1800 Aqueous Recorder Ink (Graphic Controls)
Fiber Tip Cartridges	0413	MSDS 011	Recorders - Non-Bleed Aqueous Recorder Ink Fiber Tip Cartridges
T0103RK	0413	MSDS 013	Controllers - sec-Butybenzene
0046722	1115	MSDS 014	Controllers - Ethanol
T0103KR	0511	MSDS 015	Controllers - Propane
T0103KS	1015	MSDS 016	N-Butane
T0103KT	1015	MSDS 017	Controllers - Methyl Chloride (R40)
0046721	1015	MSDS 018	Controllers - Ethyl Ether (Stabilized with Ethanol)
0046719	1015	MSDS 019	Controllers - Toluene
T0103PX	0511	MSDS 020	Controllers - Acetone
B0200CQ	1015	MSDS 021	Controllers - Nitrogen
B1275EL	1115	MSDS 022	Argon
B0201JQ	0316	MSDS 023	Controllers - Helium - He Liquefied Helium - He (Cryogenic)
D0129ZU	0413	MSDS 024	Controllers - Nylon Wick 63 Aqueous Recorder Ink
D0129ZV	0413	MSDS 024	Controllers - Nylon Wick 63 Aqueous Recorder Ink
D0129ZW	0413	MSDS 024	Controllers - Nylon Wick 63 Aqueous Recorder Ink
B0139SL	1115	MSDS 029	3M Fluorinert Electronic Liquid FC-770
B0134LM	1014	MSDS 031	Dow Corning ® 200 Fluid, 3 CST
A072203	1115	MSDS 032	MT-704 Diffusion Pump Fluid
D0114YC	1115	MSDS 034	Dow Corning 200 Fluid, 500 CST
D0116MP	0316	MSDS 043	Controllers - Ethylene Glycol
D0123MX	0111	MSDS 044	Controllers - Triethanolamine
D0116MR	0516	MSDS 045	Gabepro Flourolube Oil - All Grades
0016776	0111	MSDS 046	Controllers - Mercury
0016777	0111	MSDS 046	Controllers - Mercury
0017033	0111	MSDS 046	Controllers - Mercury
P0104RM	0616	MSDS 048	Dow Corning (R) 550 Fluid
0003093S	0417	MSDS 049	Echem Sensors - Reference Electrode Solution - 4M Potassium Chloride Solution Plus Glycol
B0158LY	0417	MSDS 049	Echem Sensors - Reference Electrode Solution - 4M Potassium Chloride Solution Plus Glycol
AS600AM	0417	MSDS 050	Echem Sensors - Glass pH Electrode Buffer Solution
1355061	1014	MSDS 051	Echem Sensors - Antimony pH Electrode Disk
Q0104KE	1215	MSDS 053	Echem Sensors - 4 Molar Potassium Chloride Saturated with Silver Chloride
0048192	1014	MSDS 076	Temperature - Dewcel Solution - 5% Lithium Chloride Solution - 1 Ounce or 1 Pint Bottle

MSDS/SDS Index

Page 2 of 3

Product	Date	Doc. Num	Title or Description
H0103AY	1014	MSDS 076	Temperature - Dewcel Solution - 5% Lithium Chloride Solution - 1 Ounce or 1 Pint Bottle
B1270KE	0516	MSDS 079	Loctite 592 PST Pipe Sealant with PTFE
B6301TF	0516	MSDS 081	Loctite LB 8012 known as Moly Paste
K0180TA	0516	MSDS 083	Loctite 430 Gen. Purpose Instant Adhesive known as 430 Super Bonder Instant Adhesive
S0106ML	0516	MSDS 086	Loctite 222MS Threadlocker
X0118CC	0516	MSDS 088	Pressure Transmitters - Lubriplate Aero
X0117AX	0516	MSDS 091	RTV 108-transl
0048130	0516	MSDS 092	Pressure Transmitters - DC111 Valve Lubricant and Sealant
X0170BA	0516	MSDS 093	Dow Corning 3145 RTV MIL-A-46146 Adhesive/Sealant- Clear
X0170BS	0516	MSDS 094	Dow Corning (R) 3140 RTV Coating
X0170BT	0516	MSDS 095	Dow Corning PR-1204 RTV Prime Coat
0046446	0516	MSDS 096	Duco Cement
B0134JY	0316	MSDS 097	Pressure Transmitters - Blue/Yellow 3.5 Ea Bars Epoxy
0048860	0516	MSDS 099	Controllers - 4205 Prism Instant Adhesive Thermal Resistant Gel
X0114AP	0516	MSDS 100	130-A; 130-AA
C1000VY	0516	MSDS 103	Pressure Transmitters - DC200 Fluid 10 CST
X0114AW	0516	MSDS 107	Extreme Pressure Lube #3
D0129ZT	0413	MSDS 108	Controllers - High Intensity Nylon Wick Aqueous Recorder Ink
L0121CN	0111	MSDS 109	Controllers - Universal Marker Aqueous Recorder Ink
L0121CS	0111	MSDS 109	Controllers - Universal Marker Aqueous Recorder Ink
L0121CX	0111	MSDS 109	Controllers - Universal Marker Aqueous Recorder Ink
L0121DC	0111	MSDS 109	Controllers - Universal Marker Aqueous Recorder Ink
X0117BY	0516	MSDS 117	LOCTITE CAT 9 known as Catalyst 9
X0117BL	0516	MSDS 118	Loctite Cat 24LV CL known as Catalyst 24LV Clr
B0200EB	1014	MSDS 119	Echem Sensors - Dissolved Oxygen Electrolyte Solution 0.5M KCL
F0109EH	0413	MSDS 120	Controllers - Moebius Oil Syntalube
BS808MW	0916	MSDS 121	ORP Standard Solution
X0180AM	0516	MSDS 125	Pressure Transmitters - FC-43 Fluorinert Brand Electronic Liquid
X0180DE	0316	MSDS 126	Pressure Transmitters - PMX200 Silicon Fluid 5 CS
X0114AF	0516	MSDS 127	Pressure Transmitters - Key Abso-Lute (Oxygen Sealing Compound)
BS814AQ	1014	MSDS 136	Echem Sensors - Internal Filling Solution
X0180HB	0316	MSDS 137	Echem Analyzers - DC838 Silicone Adhesive/Sealant (Kit-AG100WH)
X0180HC	0413	MSDS 138	Echem Analyzers - Multipurpose Alcohol Wipes (Kit-AG100WH)
BS814AF	1014	MSDS 139	Echem Sensors - Reference Electrode Solution - 4M Potassium Chloride Solution Plus Glycol

MSDS/SDS Index

Page 3 of 3

Product	Date	Doc. Num	Title or Description
1600585	0316	MSDS 140	Echem Sensors - Nyogel 761
X0180HK	0516	MSDS 141	Magnetic Flow Flowtubes - DC3-4207 Dielectric Tough Gel Part A and B
N1206TZ	0516	MSDS 142	Pressure Seals - Neobee M-20
N1205BR	0511	MSDS 143	Pressure Transmitters - DC200 Fluid, Foodgrade, 350 CST - Silicone
X0180GS	0516	MSDS 144	Pressure Transmitters - F-900 Torque Seal (Red) Sealing Compound
BS814AK	1014	MSDS 146	Reference Cavity Solution - Aqueous Electrolyte Solution with Glycerol
BS814CN	0516	MSDS 147	Sodium Reconditioning Solution
	0516	MSDS 148	ASI KCl Reference Filling Gel
Various	0516	MSDS 149	ASI KCl Saturated with AgCl Dynagen Reference Filling Gel
Various	0516	MSDS 150	ASI KCl Dynagen Reference Filling Gel
Various	0516	MSDS 151	ASI KCl Saturated with AgCl Reference Filling Gel
Q0105AX	0516	MSDS 152	Fluoride Standard - 100 ppm F-

Technical Information Index

Product	Date	Doc. Num	Title or Description
130 Controllers	1273	TI 29-201 A	130 Series Pneumatic Consotrol Controller
130 Controllers	0772	TI 29-202 A	130 Series Control Stations and 138 Series Remote Mounted Controllers
130B Controllers	1169	TI 29-204 A	130B Series Batch Controller
135 Controllers	0974	TI 29-251 A	135 Series Pneumatic Consotrol Auxiliary Stations
136 Controllers	1276	TI 29-253 A	Pneumatic Summing Units and Dynamic Compensators
138 Controllers	0772	TI 29-202 A	130 Series Control Stations and 138 Series Remote Mounted Controllers
762, 760, and 740 Controllers	0895	TI 039-200	EXACT Tuning with 762, 760, and 740 Series Controllers
Electrochemical Sensors	0216	TI 612-005	Electrodeless Conductivity, Toroidal Magnets, and the Procedure of Degaussing
MAG2 Magnetic Flowmeters	0216	TI 027-077	Technical Information Magnetic Flowmeter Application Guideline
Magnetic Flowmeters	0216	TI 27-71f	Technical Information Material Selection Guide
Magnetic Flowmeters	0216	TI 027-072	Technical Information Electrical Conductivity of Process Liquids
Mass Flowmeters	0300	TI 001-053	Tutorial Percent Solids Calculation
Vortex Flowmeters	0316	TI 027-070	Model 83 to 84 I/A Series® Intelligent Vortex Flowmeter Conversion Kit Ordering Instructions
Pressure Transmitters	0216	TI 37-75b	Technical Information - Material Selection Guide
Pressure Transmitters	0216	TI 037-097	Technical Information - Process Sealing of Transmitters for use in Class I, Zone 0, 1, and 2 Hazardous Locations
IMV31	0217	TI 037-098	Using IMV31 for Boiler Drum Level Applications
Other	0816	TI 037-094	Quality Assurance Certificates for Non-Nuclear Parts and Products
Other	1116	TI 005-101	Technical Information: Factory Mutual Approved Intrinsically Safe Apparatus, Associated Apparatus, and Equipment with Nonincendive Field Wiring Connections
Other	1016	TI 005-105	Canadian Standards Association (CSA) Certified Intrinsically Safe Apparatus, Associated Apparatus, and Equipment with Nonincendive Field Wiring Connections

Portuguese Manuals

Eckardt Product Manuals (Portuguese)

Product	Date	Doc. Num	Title or Description
240 Séries LevelStar	0514	EX EML0010 A-(pt)	Instruções de segurança para 240 Séries 244LD LevelStar, 244LVP LevelStar
244LD LevelStar	0811	MI EML0710 G-(en)	Transmissor Inteligente de Empuxo para Nível de Líquido, Interface e Densidade com deslocador e Tubulação de Torque – Versão HART
244LD LevelStar	0914	MI EML0710E-(pt)	Transmissor Inteligente de Empuxo com Tubo de Torque e Deslocador para Medição de Nível, Interface e Densidade - Todas as versões
244LVP LevelStar	0210	MI EML1710A-(en)	Transmissor de Sensor Inteligente de Empuxo para Nível, Interface e Densidade do Líquido
244LVP LevelStar	1012	MI EML1710G-(en)	Transmissor de Sensor Inteligente de Empuxo para Nível, Interface e Densidade do Líquido
LG01	0414	AD EML3010 E-(pt-Braz)	Guided Wave Radar Level Meter
LR01	0414	AD EML3020 E-(pt-Braz)	Free-Space Radar Level Meter
SRD960	0414	MI EVE0109 A-(pt)	SRD960 Posicionador Universal – Todas as versões
SRD960	0210	QG EVE0109 B-(pt)	Guia Rápido – SRD960 Posicionador Universal
SRD960	1014	Requisitos de Segurança	Requisitos de Segurança para SRD960 Posicionador universal e SRI983 Posicionador eletropneumático
SRD991	0914	MI EVE0105 E-(en)	SRD991 Posicionador Inteligente - Todas as Versões
SRD991	0814	QG EVE0105 B-(pt)	Guia Rápido – Posicionador Inteligente SRD991
SRI983	1103	MI EVE0103 A-(po)	SRI983 Posicionador Eletro-pneumático à prova de explosão ou versão EEx d
SRI983	1014	Requisitos de Segurança	Requisitos de Segurança para SRD960 Posicionador universal e SRI983 Posicionador eletropneumático
SRI986	0707	MI EVE0102 A-(pt)	Posicionador Eletropneumático SRI986
SRI986	0814	QG EVE0102 (pt)	Guia Rápido – Posicionador Eletropneumático SRI986
SRP981	0703	MI EVE0101 A-(po)	SRP981 Posicionador Pneumático

Positioners and I/P Converters Product Manuals (Portuguese)

Product	Date	Doc. Num	Title or Description
E69F	0714	MI 018-429	Conversor de sinais de corrente para Pneumático E69F e Posicionador eletropneumático E69P Informações de segurança
E69F	0714	MI 018-430	Conversor de Sinal de Corrente para Pneumático E69F
E69P	0914	MI 018-440	E69P - Posicionador de Válvulas de Corrente para Pneumático

Flow Product Manuals (Portuguese)

Product	Date	Doc. Num	Title or Description
All Flow	0117	MI 019-179	Informações de Segurança de Produtos de Fluxo
84 Vortex	0716	MI 019-146	Manual de Instruções Universal Medidores de Vazão Vortex® Série I/A Modelo 84 Instalação e Início de operação
CFS10	0517	MI 019-120	I/A Series® Tubos de Fluxo Massico Modelos CFS10 e CFS20 Instalação, Resolução de Problemas e Manutenção
CFS20	0517	MI 019-120	I/A Series® Tubos de Fluxo Massico Modelos CFS10 e CFS20 Instalação, Resolução de Problemas e Manutenção
CFT50	0204	MI 019-132	I/A Series® Transmissor Digital de Vazão Mássica tipo Coriolis Com Comunicação HART Modelo CFT50 Instalação, Partida, Configuração e Manutenção
CFT50	0404	PSS 1-2B7 A	I/A Series® Medidor de Vazão Mássica e Densidade Modelo CFT50 Transmissor Digital de Vazão Mássica tipo Coriolis com Protocolo de Comunicação HART®
CFT51	0517	MI 019-140	I/A Series® Transmissor Digital de Fluxo de Massa Com Protocolos de Comunicação HART e Modbus Modelo CFT51 Instalação, Inicialização, Configuração, e Manutenção

Portuguese Manuals

Pressure Product Manuals (Portuguese)

Page 1 of 2

Product	Date	Doc. Num	Title or Description
All Pressure Transmitters	0609	MI 020-357	Transmissor de Pressão I/A Series Manual de Segurança Funcional
All Pressure Transmitters	1116	MI 020-358	Transmissores de Pressão Série I/A® Informações sobre Segurança
All Pressure Transmitters	1116	MI 020-359	Manual de Instruções Universal Transmissores de Pressão Série I/A® Modelos IAP10, IAP20, IGP10, IGP20, IGP25 e IGP50, IDP10, IDP25, IDP50 Configuração, Calibração, Instalação e Operação
IAP10S	0816	MI 020-542	Transmissores de Série S de Pressão para I/A Series® Informações de Segurança ATEX/IECEX
IAP10S	0417	MI 020-601	Transmissores de Série S de Pressão Foxboro® Pressão Absoluta IAP10S e Pressão de Medidor IGP10S com Comunicação HART Instalação, Operação, Calibração, Configuração e Manutenção
IAP20-F	0716	MI IAP20-F/IGP20-F	Série I/A® Transmissores de pressão Transmissores de pressão absoluta IAP20 e Transmissores de pressão manométrica IGP20 com comunicação Fieldbus FOUNDATION Instalação, operação, calibração, configuração e manutenção
IAP20-T	0816	MI IAP20-T/IGP20-T	Transmissores de pressão Série I/A IAP20 Pressão absoluta e Pressão Manométrica IGP20 com comunicação HART Instalação, Operação, Calibração, Configuração e Manutenção
IDP10-F	0716	MI IDP10-F	Série I/A® Transmissores de pressão IDP10 Pressão diferencial com comunicação fieldbus FOUNDATION Instalação, operação, calibração, configuração e manutenção
IDP10-T	0716	MI IDP10-T	Transmissores de pressão Série I/A® Pressão diferencial IDP10 com Comunicação HART Instalação, Operação, Calibração, Configuração e Manutenção
IDP10S	0816	MI 020-542	Transmissores de Série S de Pressão para I/A Series® Informações de Segurança ATEX/IECEX
IDP10S	0417	MI 020-602	Transmissores de Série S de Pressão Foxboro® IDP10S Transmissor de Pressão Diferencial com Comunicação HART Instalação, Operação, Calibração, Configuração e Manutenção
IDP15D	0211	MI 020-600	Transmissor de pressão do componente da série do sistema de controle da empresa Modelos IDP15D, IDP31D, IDP32D e IGP60G com Comunicação HART Instalação, operação, calibração, configuração e manutenção
IDP15D	0514	MI 020-540	Informações de segurança dos transmissores de pressão do componente da série do sistema de controle da empresa Modelos IDP15D, IDP31D, IDP32D e IGP60G

Portuguese Manuals

Pressure Product Manuals (Portuguese)

Page 2 of 2

Product	Date	Doc. Num	Title or Description
IDP31D	0211	MI 020-600	Transmissor de pressão do componente da série do sistema de controle da empresa Modelos IDP15D, IDP31D, IDP32D e IGP60G com Comunicação HART Instalação, operação, calibração, configuração e manutenção
IDP31D	0514	MI 020-540	Informações de segurança dos transmissores de pressão do componente da série do sistema de controle da empresa Modelos IDP15D, IDP31D, IDP32D e IGP60G
IDP32D	0211	MI 020-600	Transmissor de pressão do componente da série do sistema de controle da empresa Modelos IDP15D, IDP31D, IDP32D e IGP60G com Comunicação HART Instalação, operação, calibração, configuração e manutenção
IDP32D	0514	MI 020-540	Informações de segurança dos transmissores de pressão do componente da série do sistema de controle da empresa Modelos IDP15D, IDP31D, IDP32D e IGP60G
IGP10S	0816	MI 020-542	Transmissores de Série S de Pressão para I/A Series® Informações de Segurança ATEX/IECEX
IGP10S	0417	MI 020-601	Transmissores de Série S de Pressão Foxboro® Pressão Absoluta IAP10S e Pressão de Medidor IGP10S com Comunicação HART Instalação, Operação, Calibração, Configuração e Manutenção
IGP20-F	0716	MI IAP20-F/IGP20-F	Série I/A® Transmissores de pressão Transmissores de pressão absoluta IAP20 e Transmissores de pressão manométrica IGP20 com comunicação Fieldbus FOUNDATION Instalação, operação, calibração, configuração e manutenção
IGP20-T	0816	MI IAP20-T/IGP20-T	Transmissores de pressão Série I/A IAP20 Pressão absoluta e Pressão Manométrica IGP20 com comunicação HART Instalação, Operação, Calibração, Configuração e Manutenção
IGP60G	0211	MI 020-600	Transmissor de pressão do componente da série do sistema de controle da empresa Modelos IDP15D, IDP31D, IDP32D e IGP60G com Comunicação HART Instalação, operação, calibração, configuração e manutenção
IDP60G	0514	MI 020-540	Informações de segurança dos transmissores de pressão do componente da série do sistema de controle da empresa Modelos IDP15D, IDP31D, IDP32D e IGP60G

Portuguese Manuals

Temperature Product Manuals (Portuguese)

Product	Date	Doc. Num	Title or Description
RTT15	0607	MI 020-449	Diagramas de Conexão de Segurança Intrínseca
RTT15-F/ RTT15-P	0216	MI 020-462	Transmissores de Temperatura de I/A Series® Modelo RTT15-F com Protocolo FOUNDATION® Fieldbus Modelo RTT15-P com Protocolo PROFIBUS®
RTT15-H/ RTT15-T	0216	MI 020-463	Transmissores de Temperatura da I/A Series® Modelo RTT15-H com Protocolo HART® 7 Modelo RTT15-T com Protocolo HART 5
RTT20	0408	MI 020-453	Transmissor de Temperatura Série ® I/A Instalação, Configuração, Operação, Calibração e Manutenção Estilo A
RTT25	0207	MI 020-488	Transmissores de Temperatura RTT25 Série I/A® com Comunicação FOUNDATION™ Fieldbus Instalação, Calibração, Configuração Local/Remota e Manutenção
RTT30	0114	MI 020-530	Série I/A® Transmissor de Temperatura Com Protocolo HART®
RTT30	0114	MI 020-531	Modelo RTT30 Transmissor de temperatura I/A Series® com protocolo Fieldbus HART ou FOUNDATION Informações sobre segurança
RTT30	0114	MI 020-532	RTT30 I/A Series® Transmissor de Temperatura Com Protocolo de FOUNDATION Fieldbus
RTT80	0214	MI 020-581	Transmissor de Temperatura da I/A Series Informações de Segurança ATEX/IECEX do Modelo RTT80
RTT80-T	1114	MI 020-582	Transmissor de Temperatura® da I/A Series Modelo RTT80-T com Protocolo HART®
RTT80-T	1114	MI 020-585	Transmissor de Temperatura® da I/A Series Modelo RTT80-T com Protocolo HART® 7 e Certificação SIL Opcional
RTT80-F	0214	MI 020-583	Transmissor de Temperatura® da I/A Series Modelo RTT80-F com protocolo FOUNDATION Fieldbus™

Portuguese Manuals

Electrochemical Product Manuals (Portuguese)

Product	Date	Doc. Num	Title or Description
PH12	0218	MI 611-214	Sensores e acessórios da Série PH12 para pH e ORP - Instalação, resolução de problemas e manutenção